


PN RABAT SHEFFIELD D

Montagehandleiding

Notice de montage


Manual

Montageanleitung


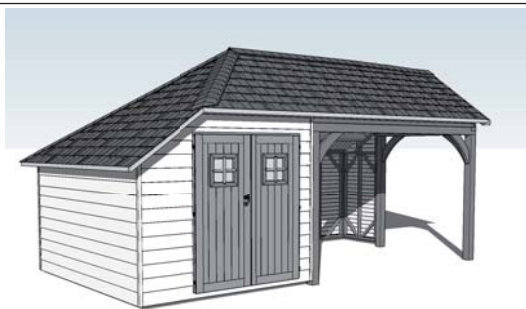


www.tack.be


01

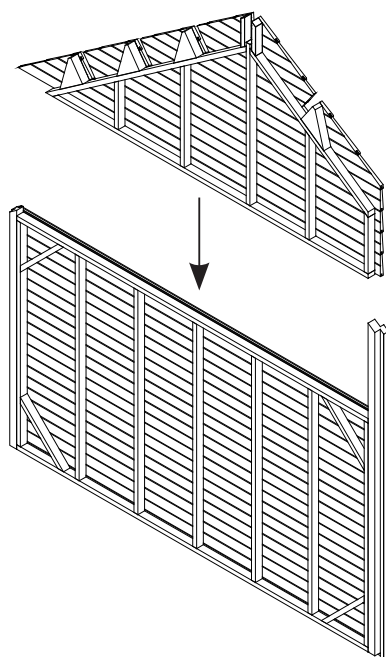

Ø 4 x 60mm

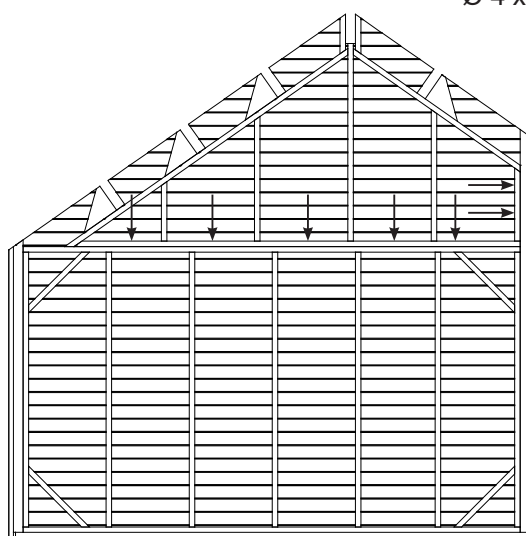


02

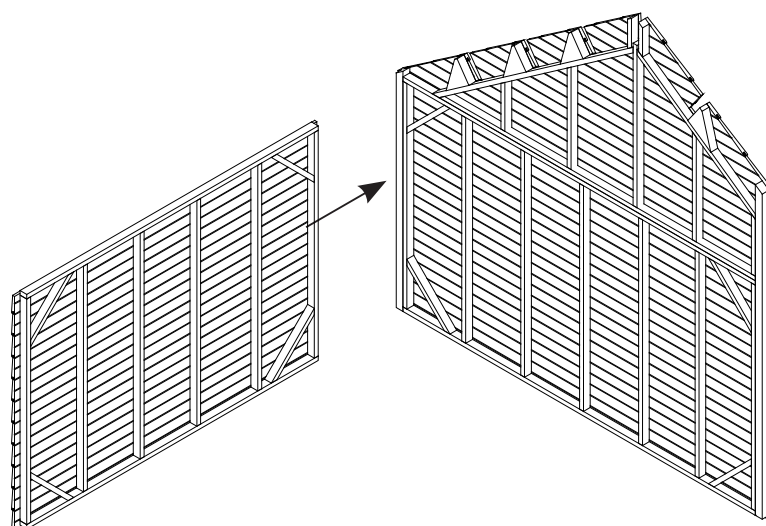



Ø 4 x 60mm




03

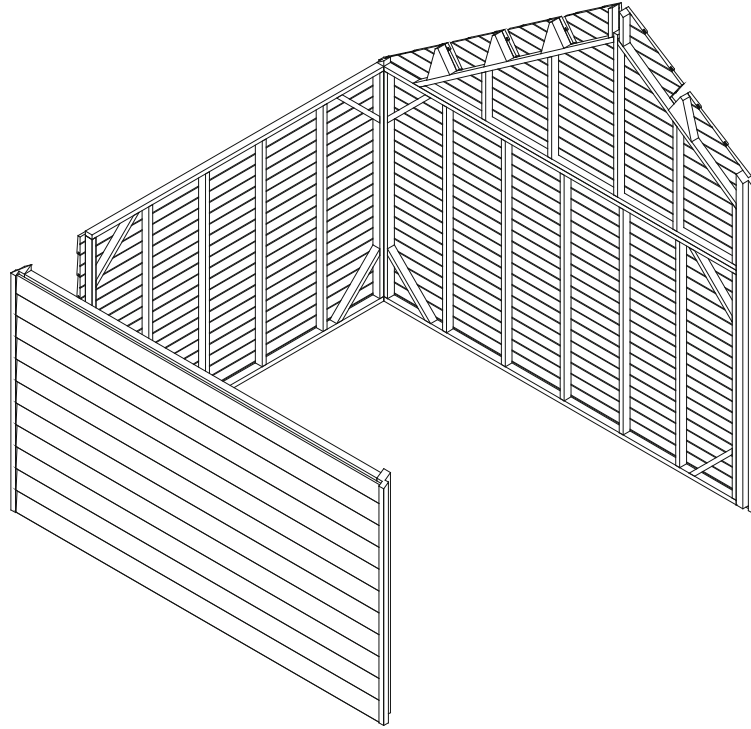


04




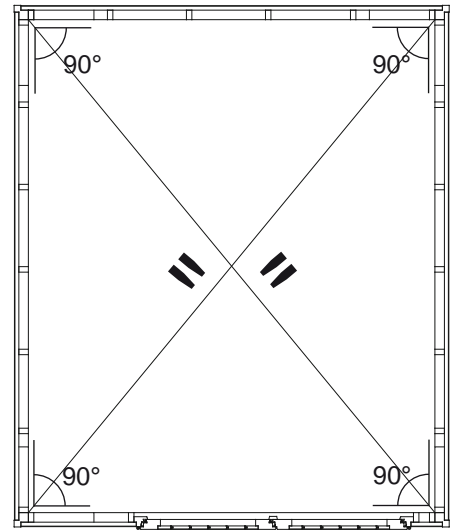
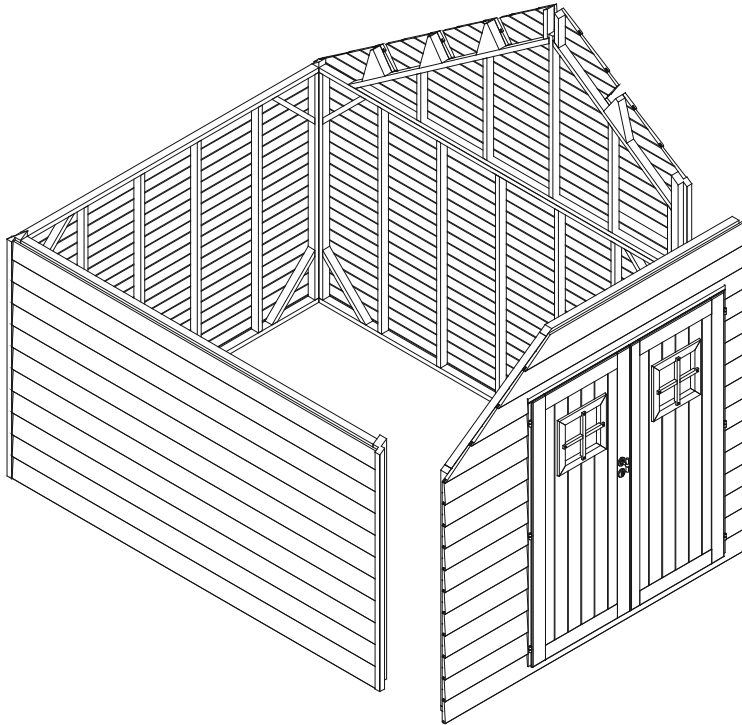


05

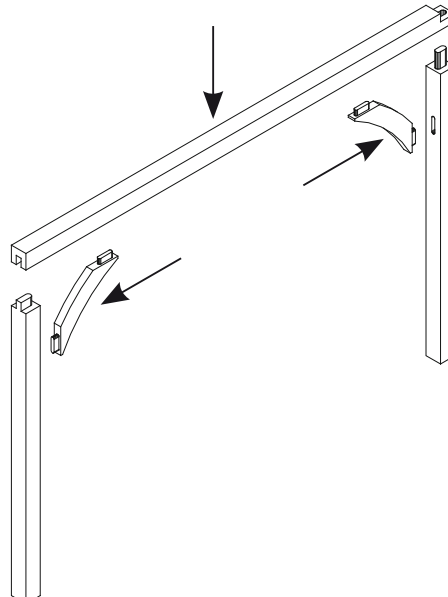


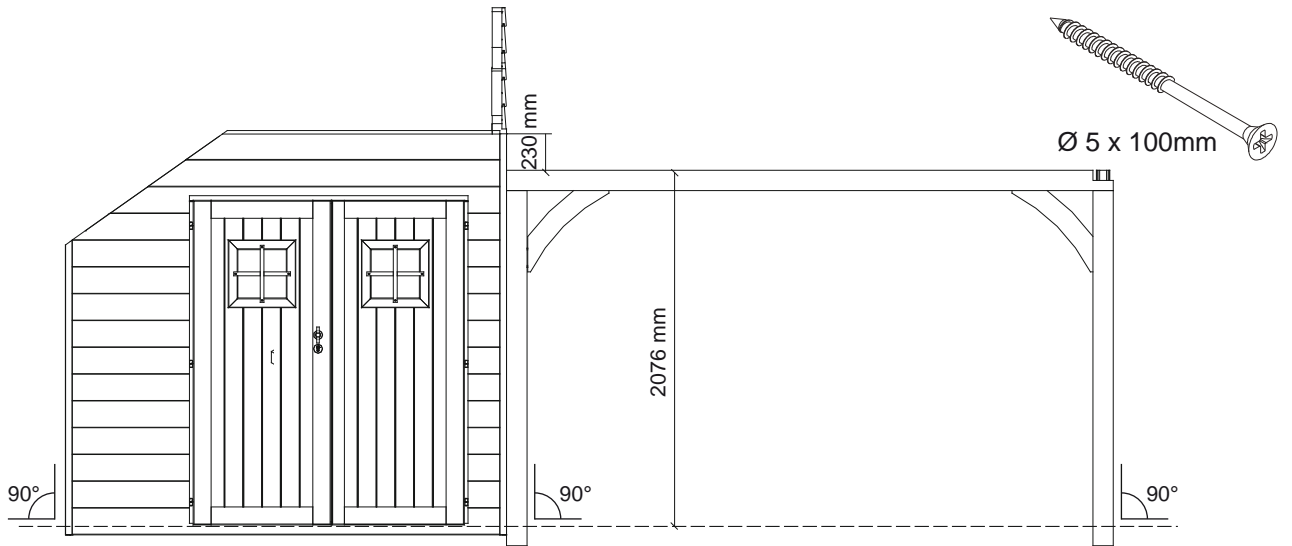


● **voorboren**
pre-percer
pre drill
Vorborehen

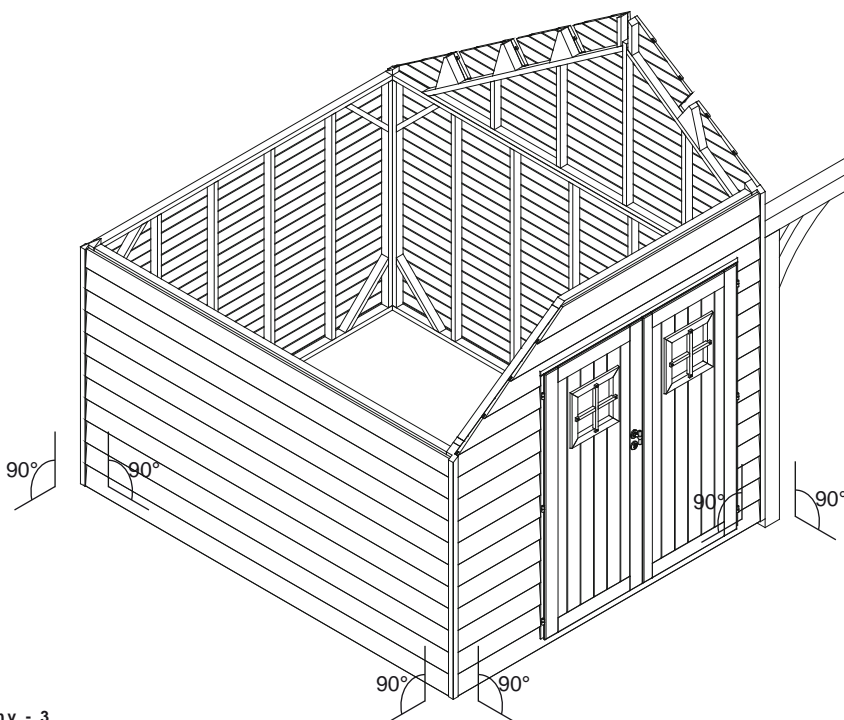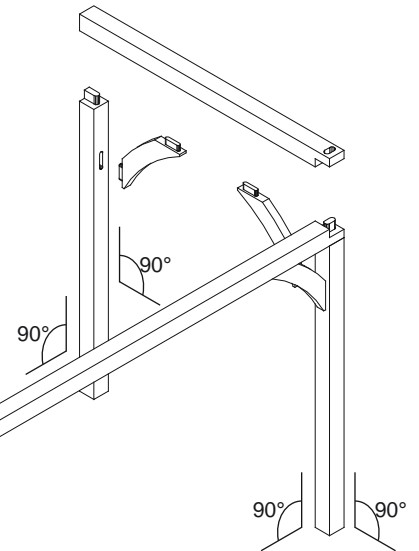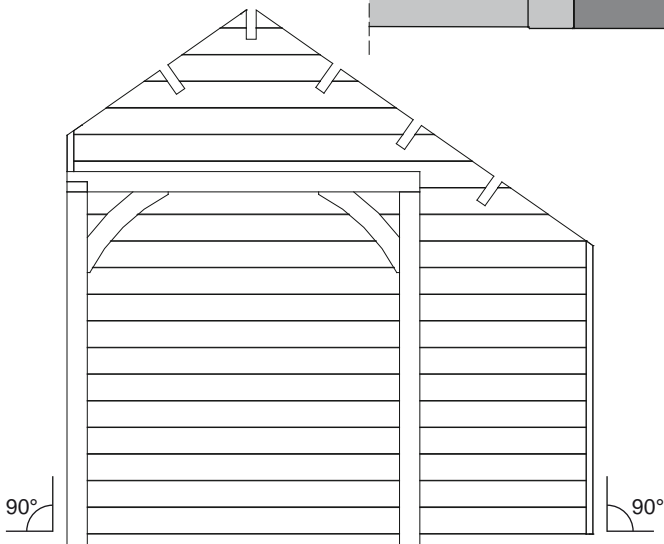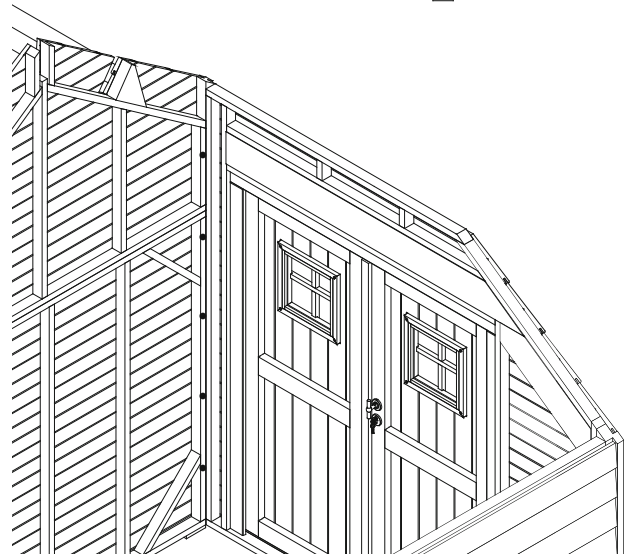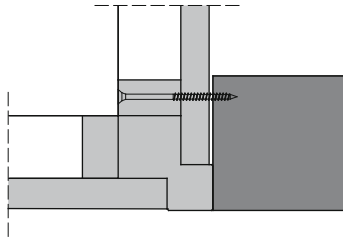


07

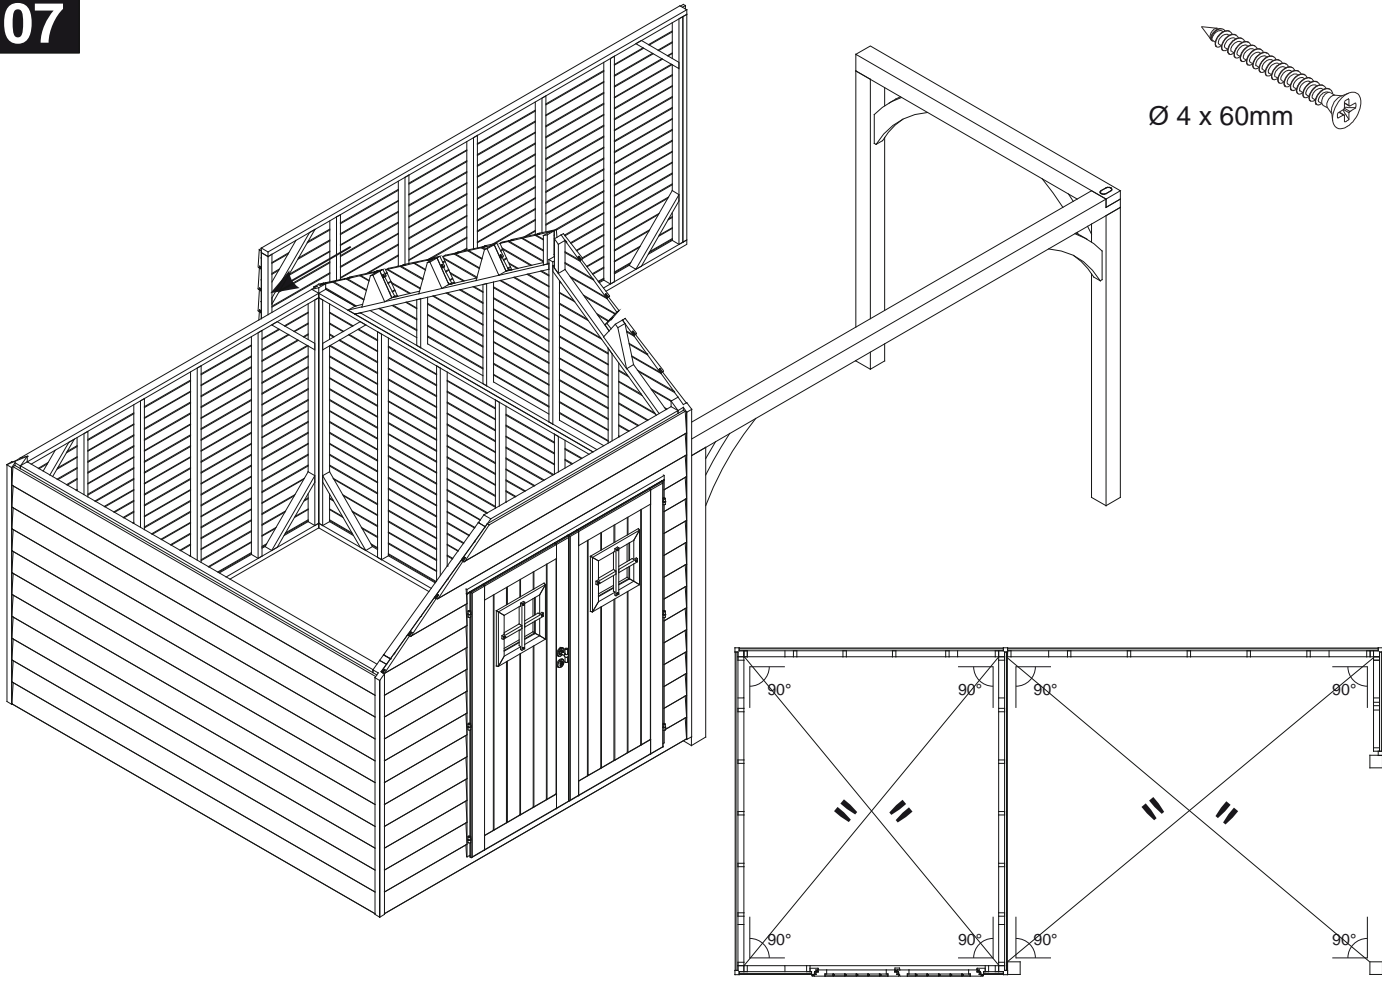


08

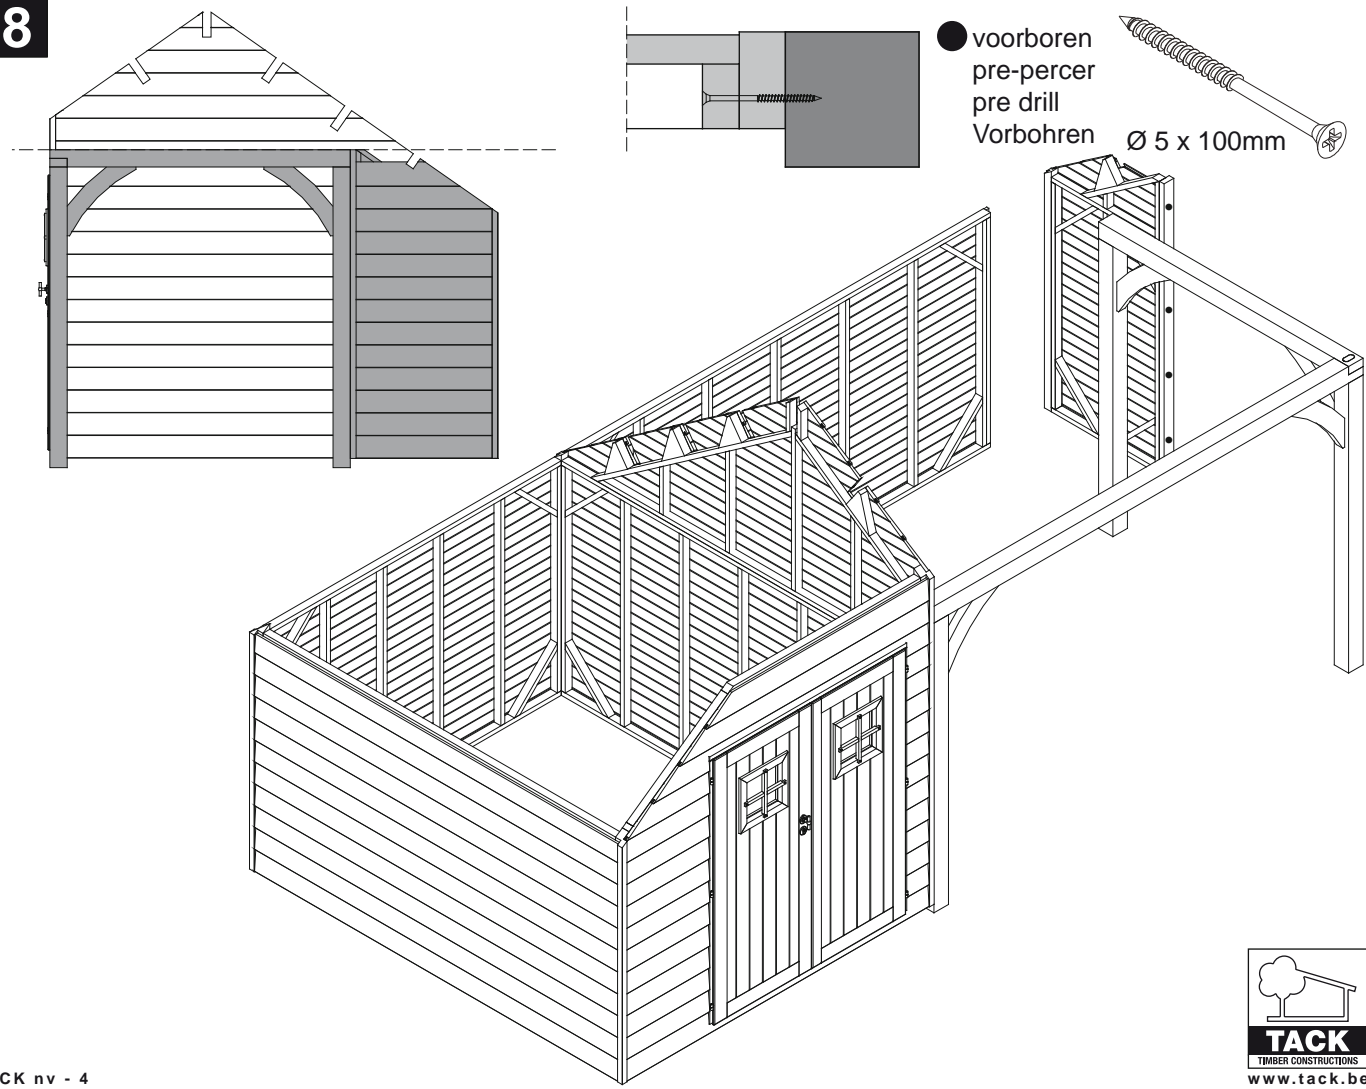

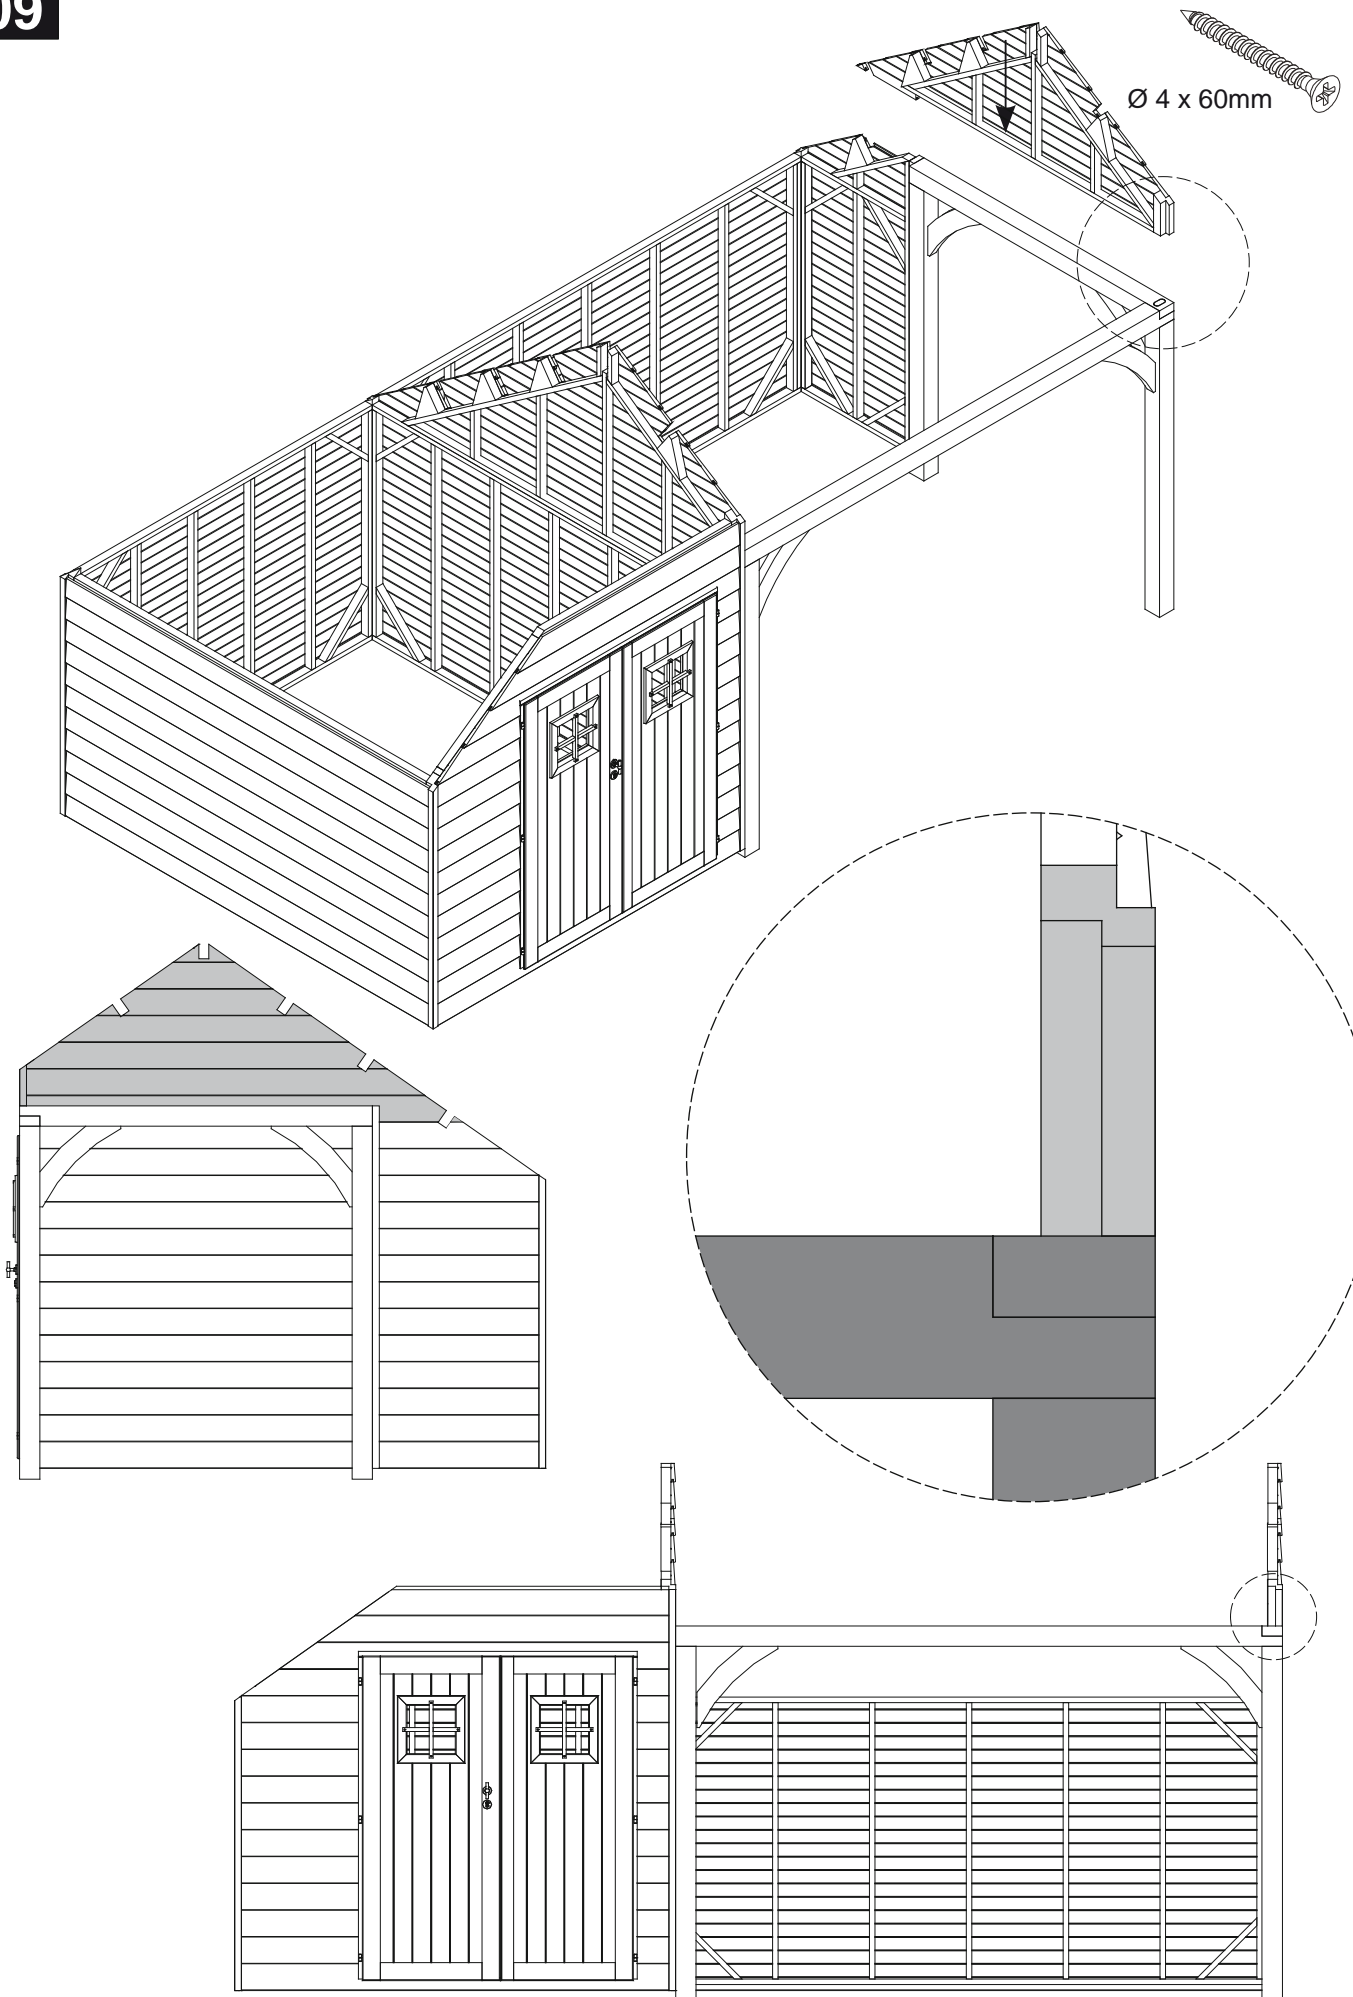


10

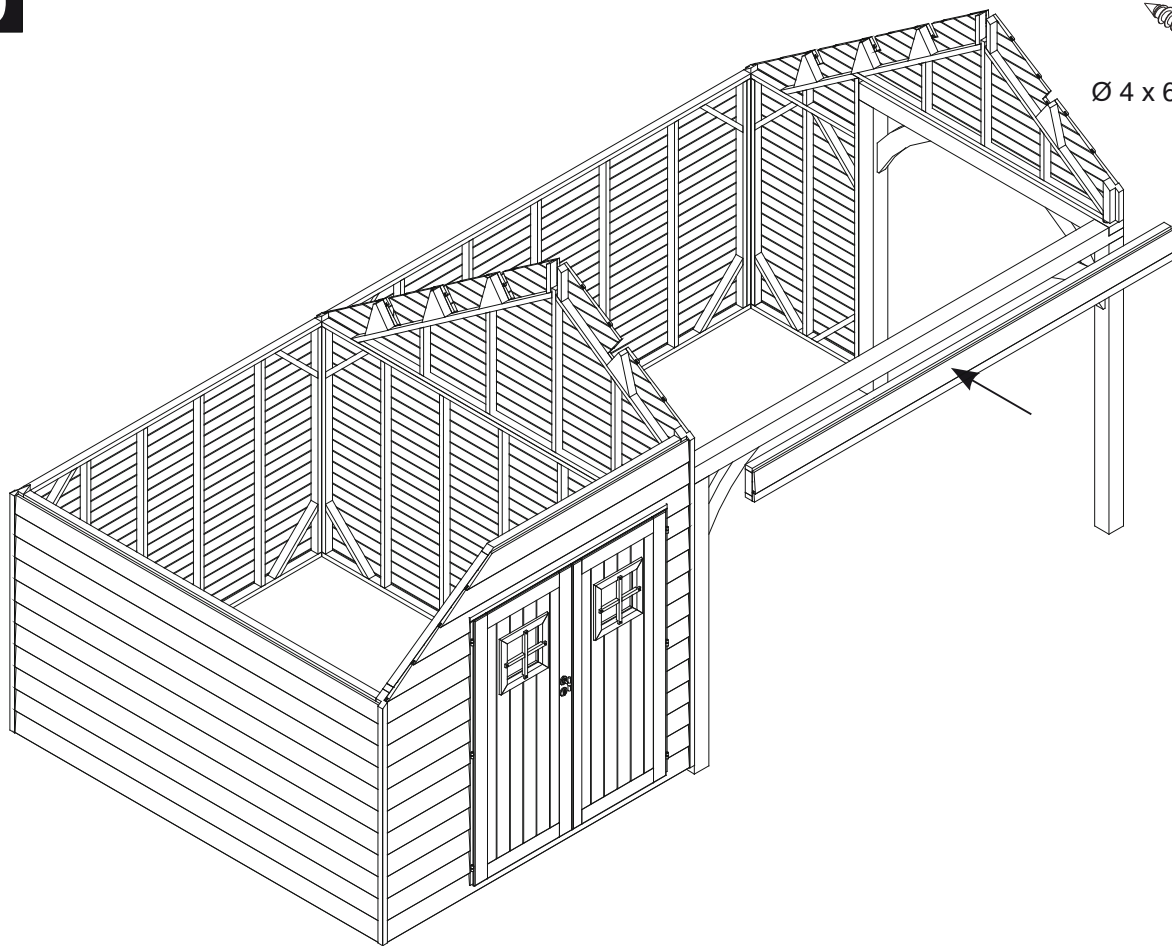


Ø 4 x 60mm

11

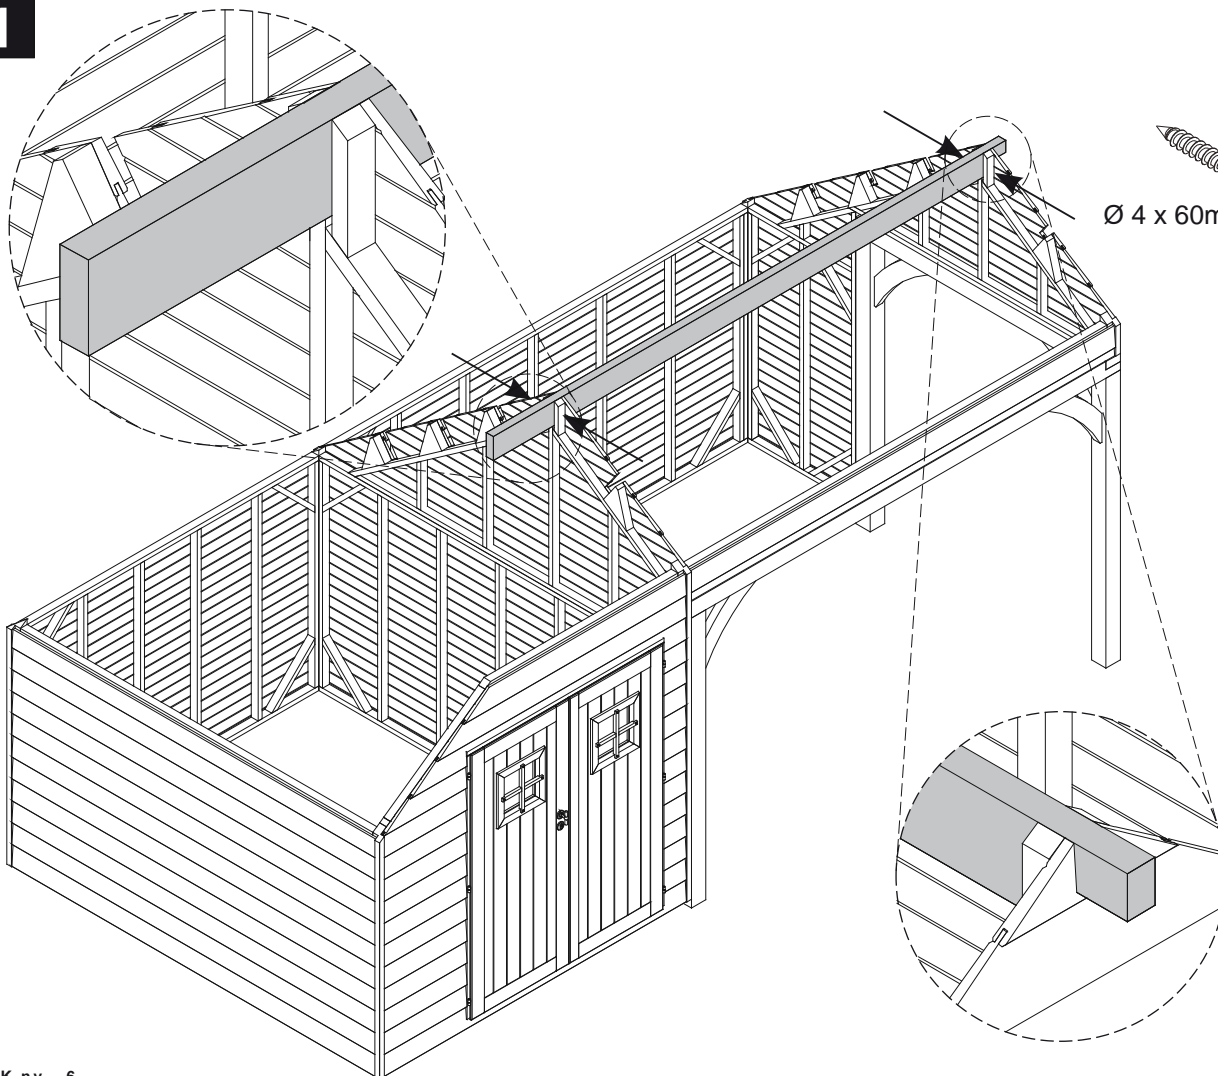


Ø 4 x 60mm


12

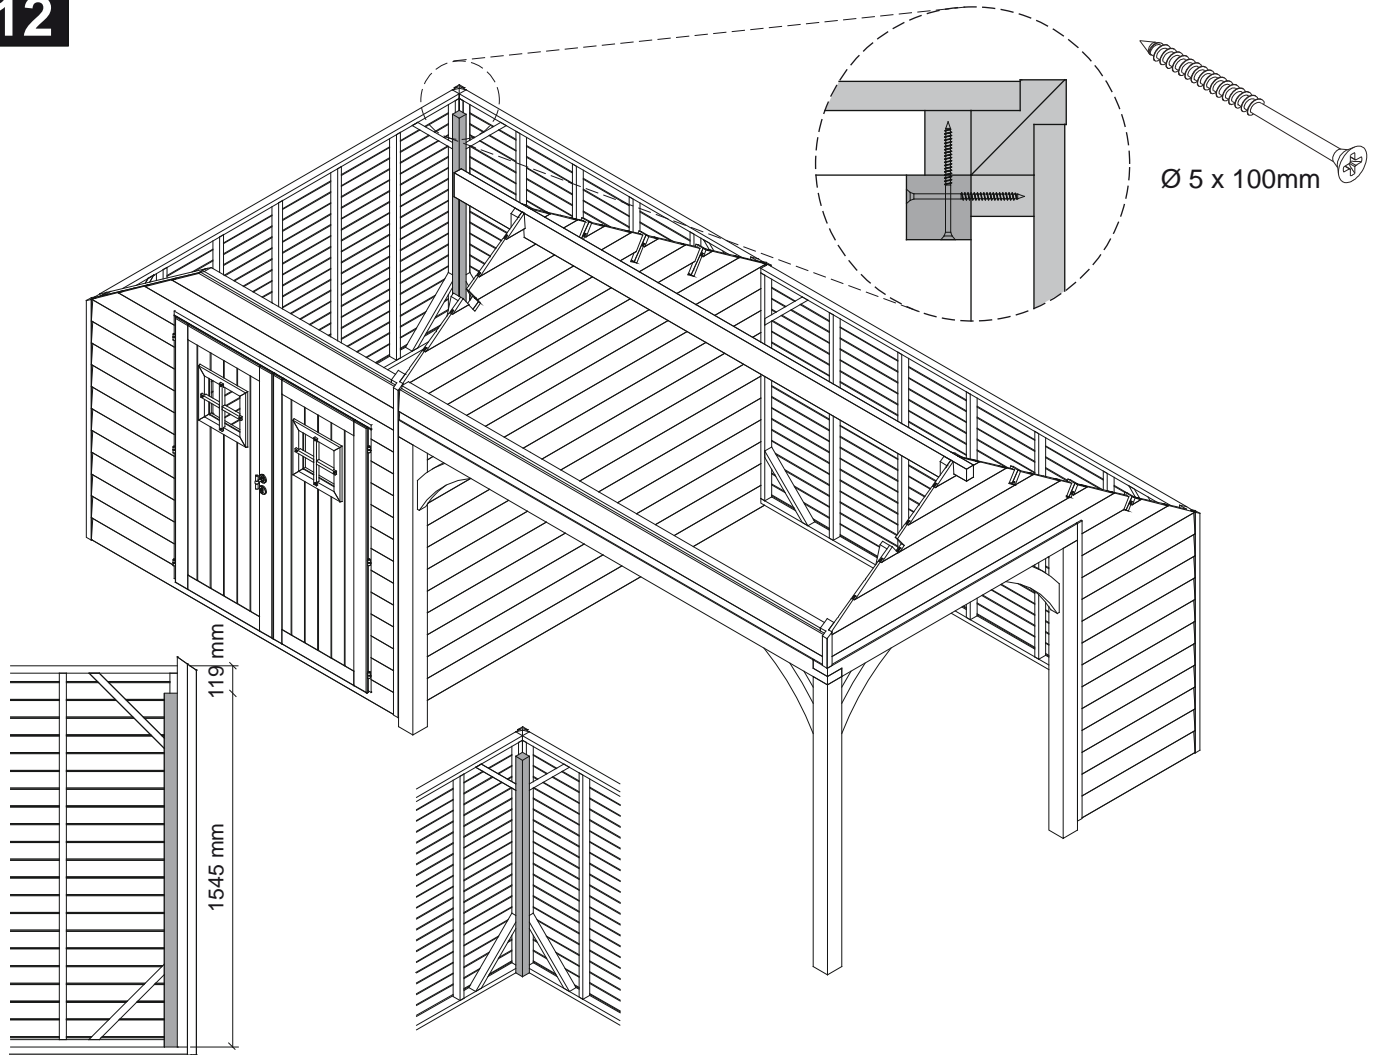


13

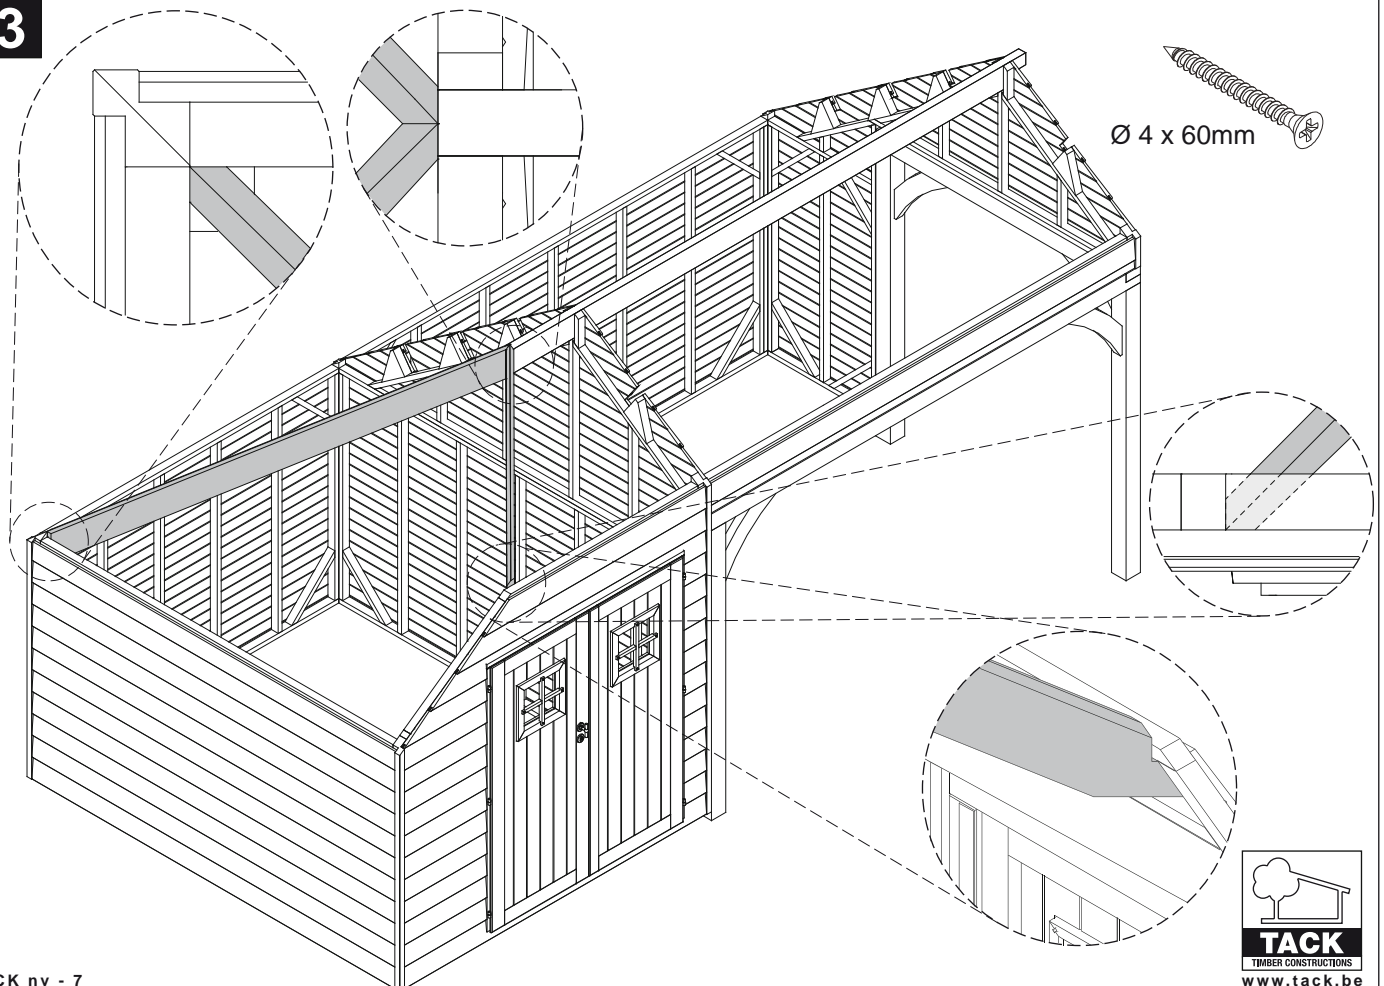


14

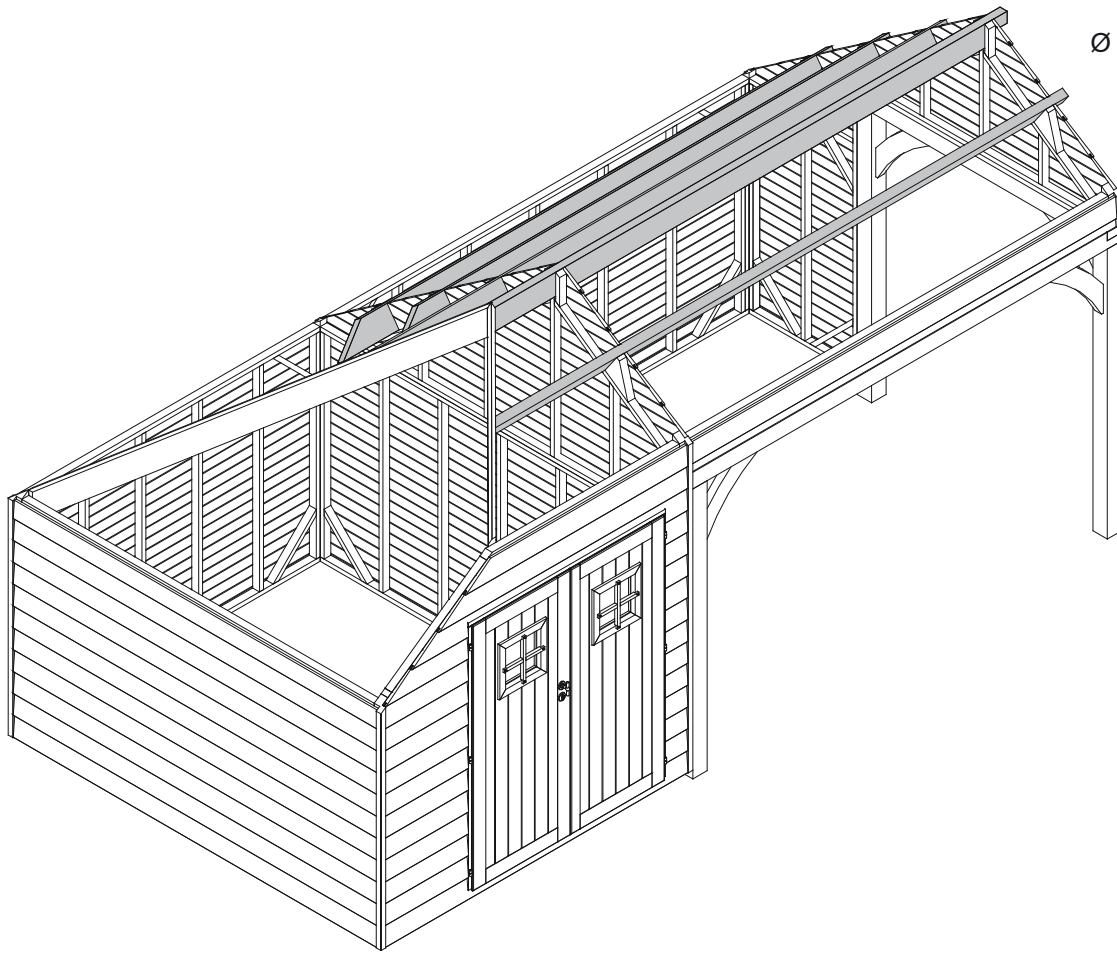


Ø 5 x 80mm




15

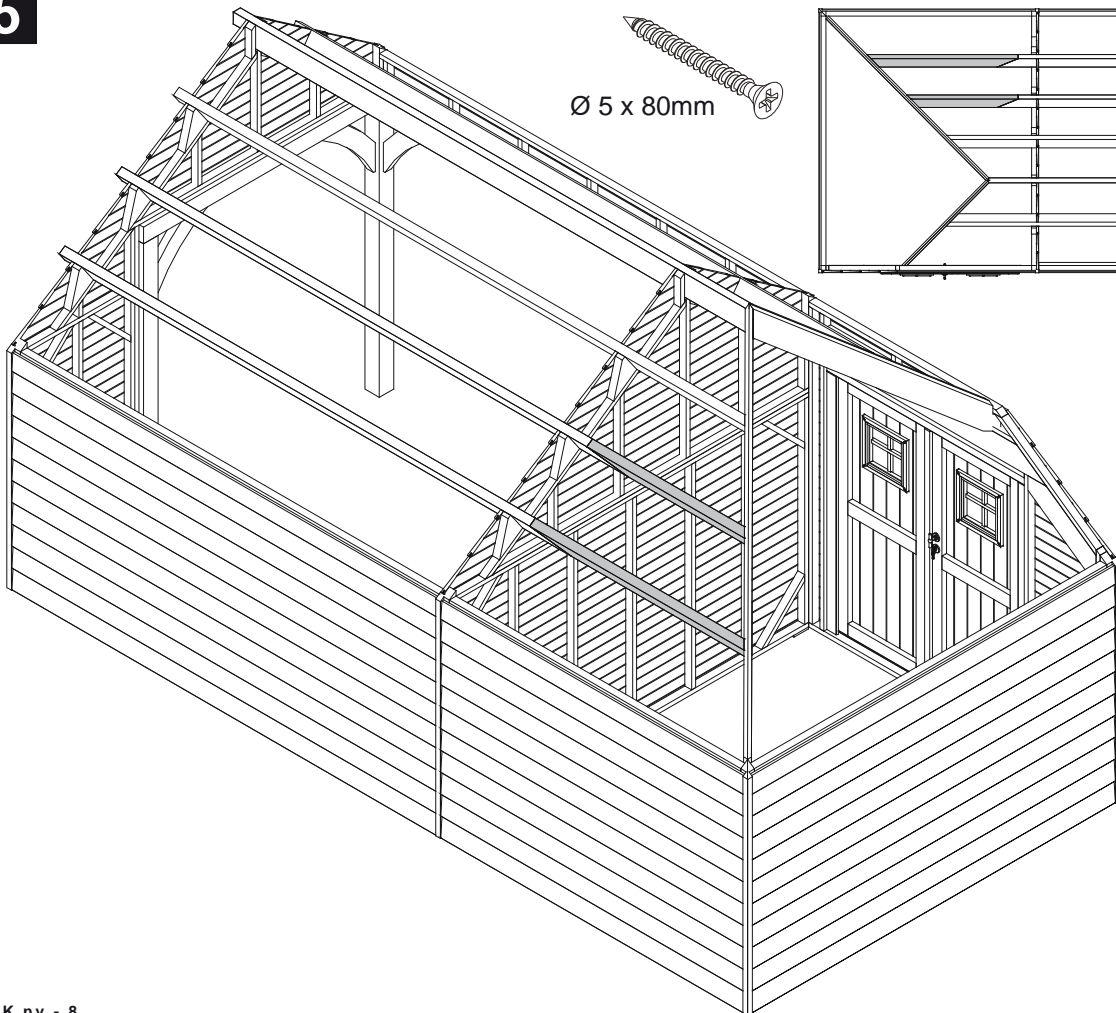


Ø 5 x 80mm

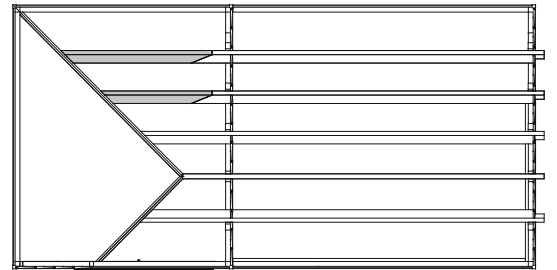


16

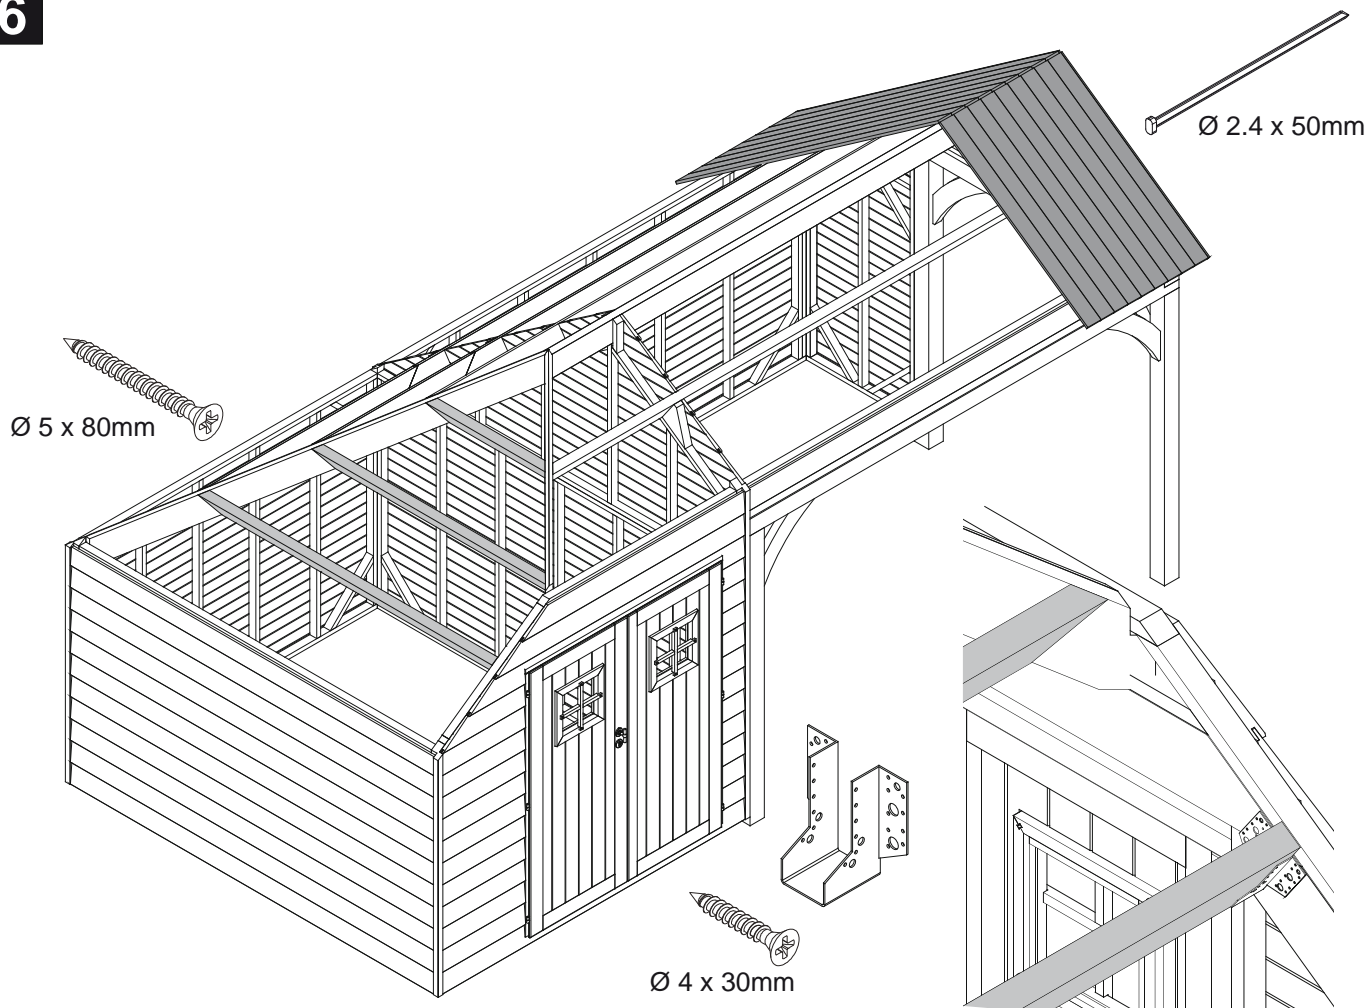


17

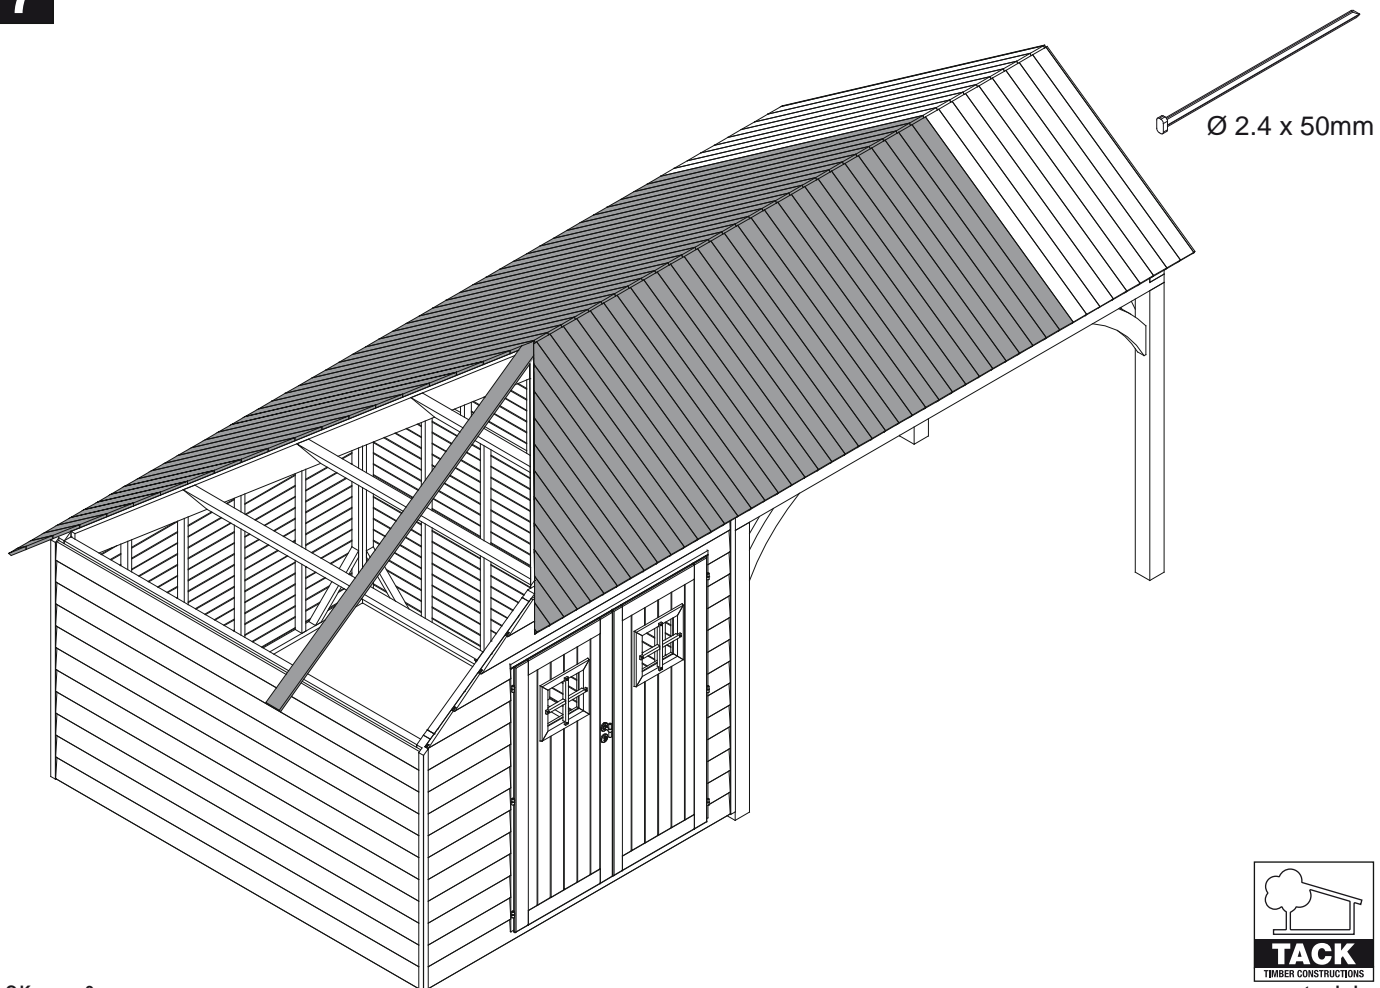


18

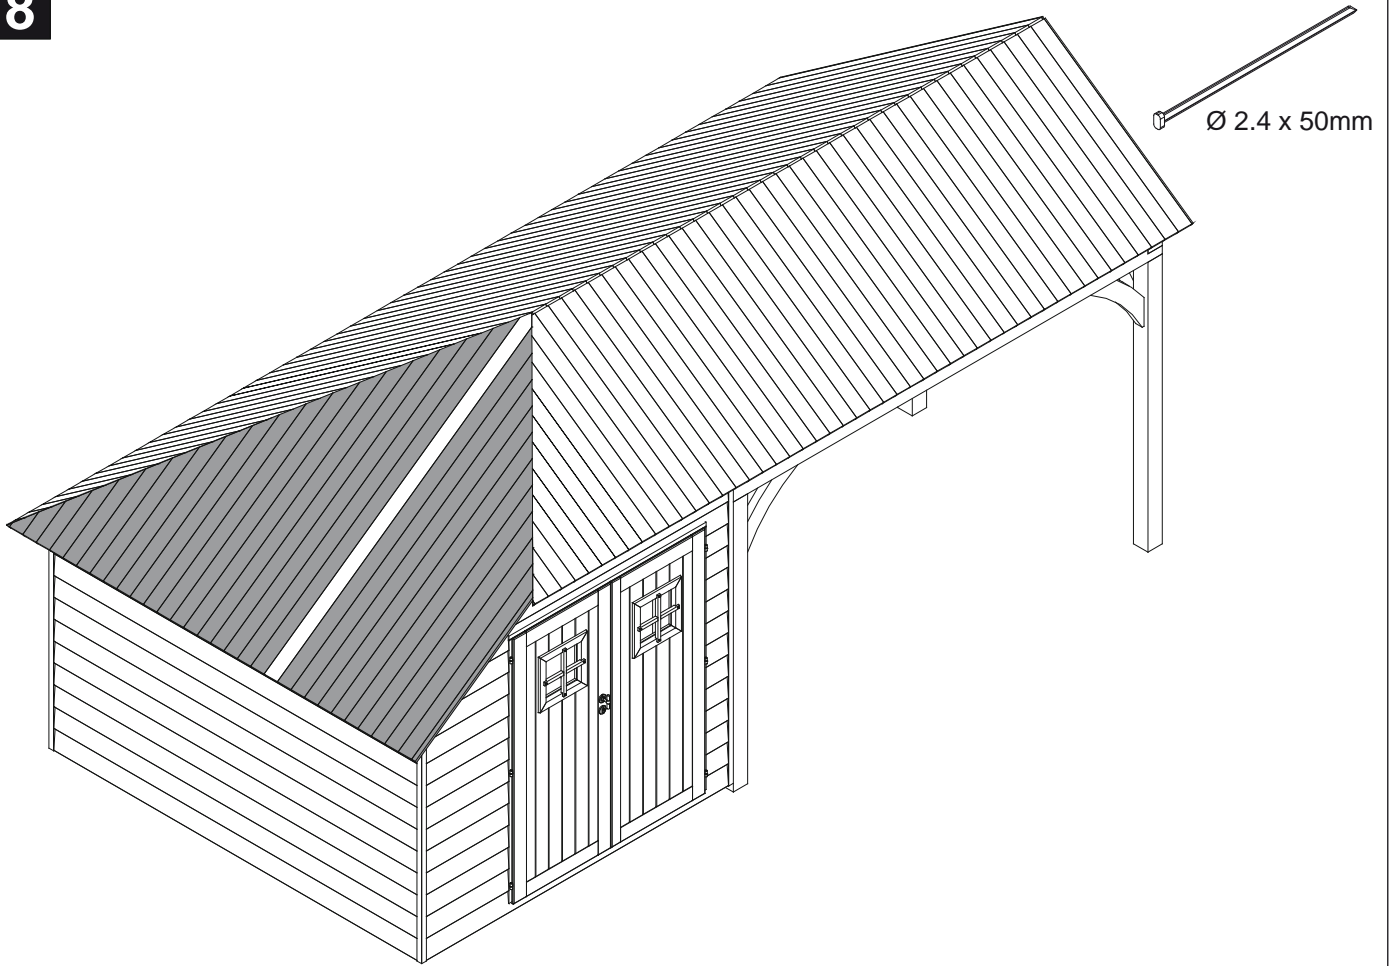


19

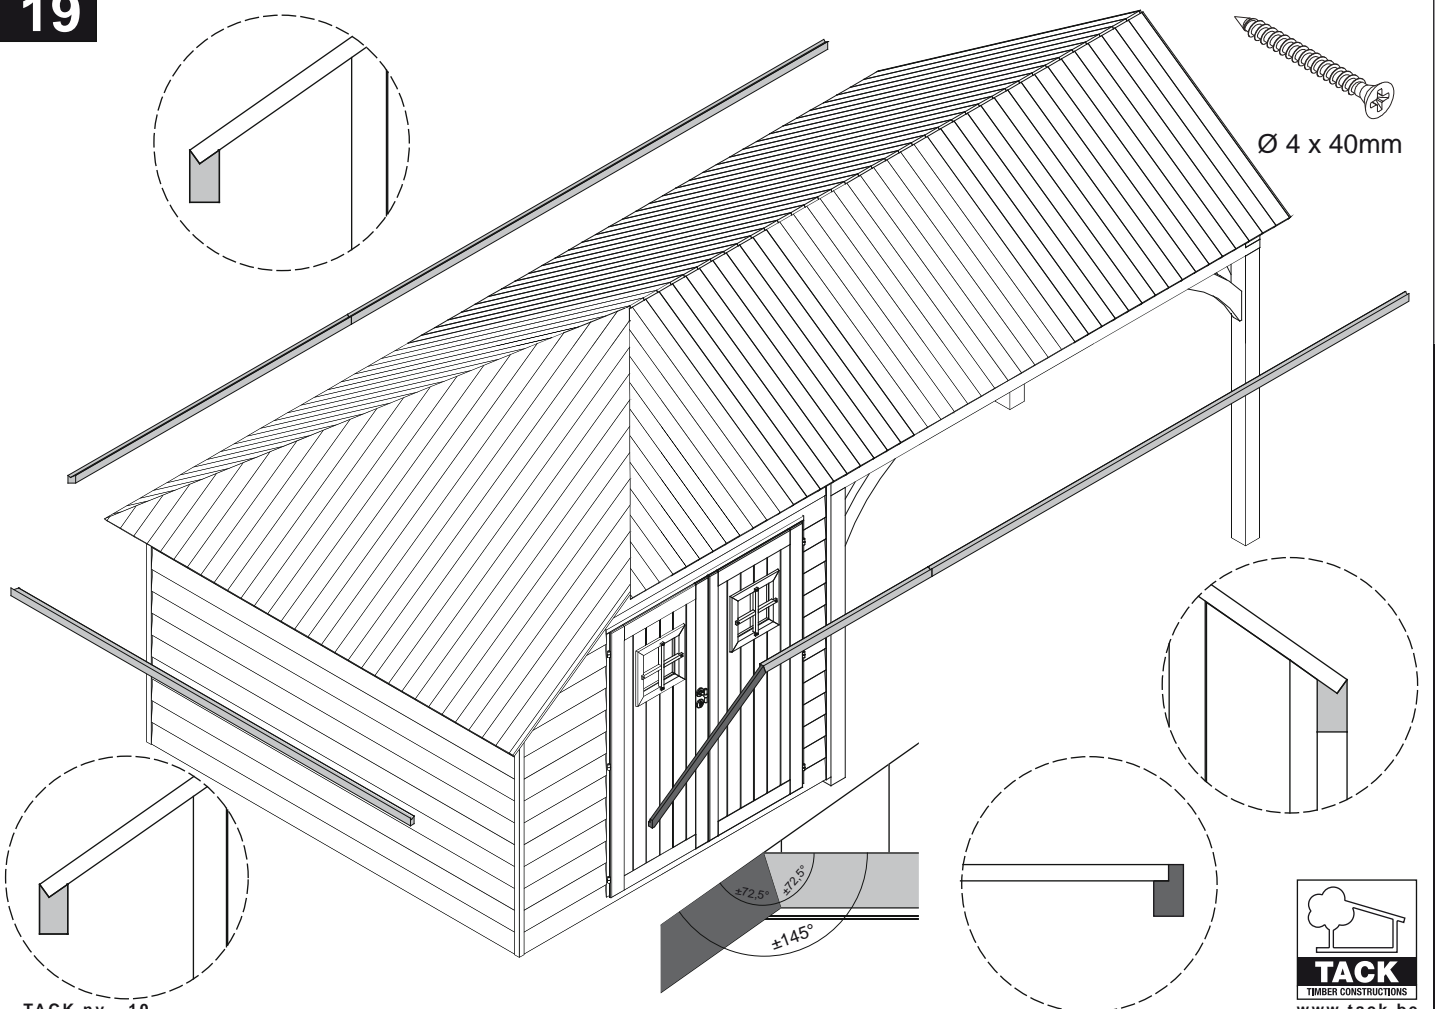


20

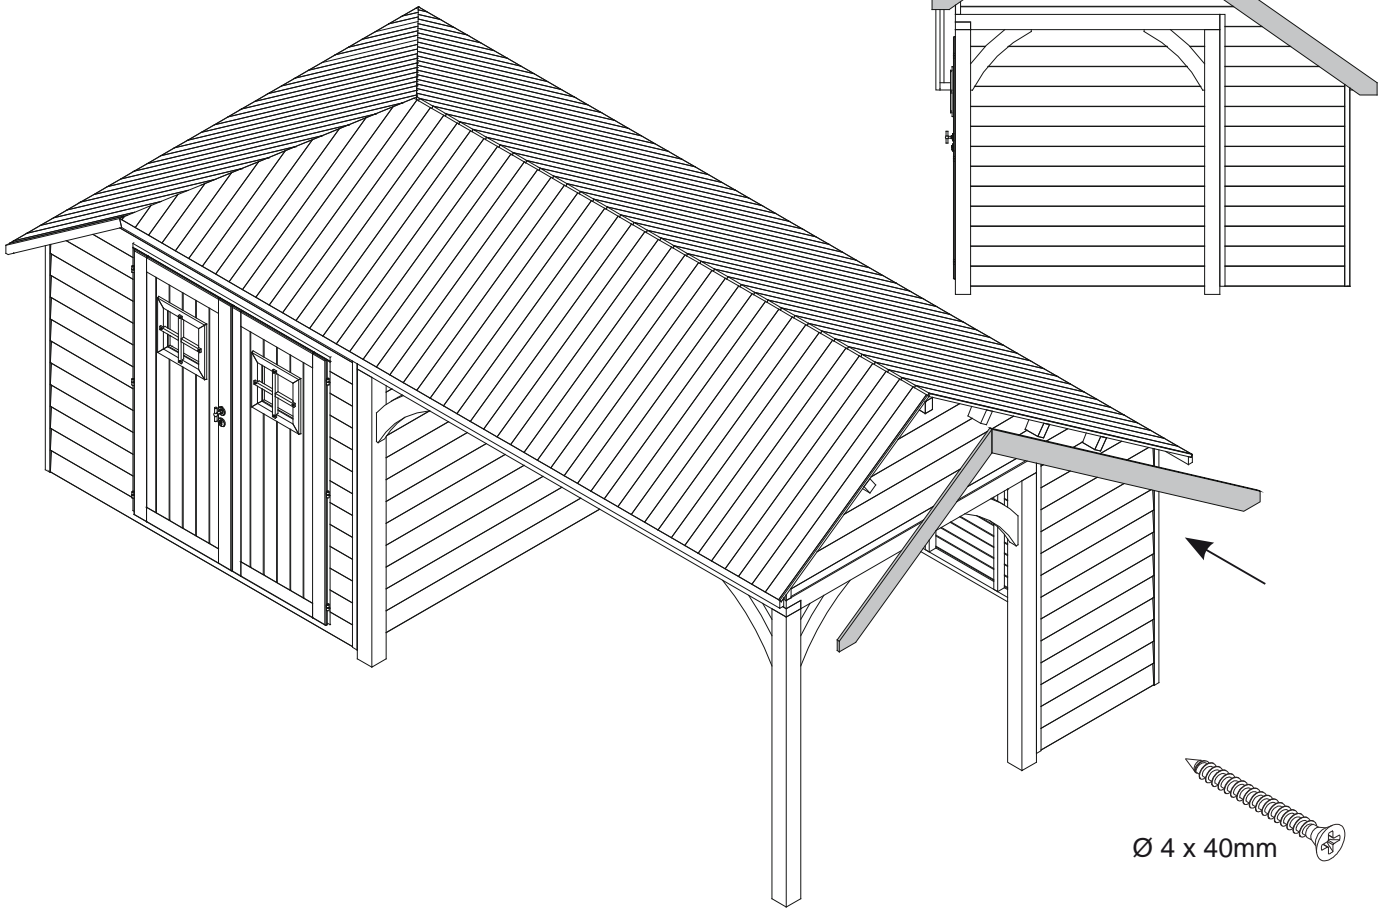


21

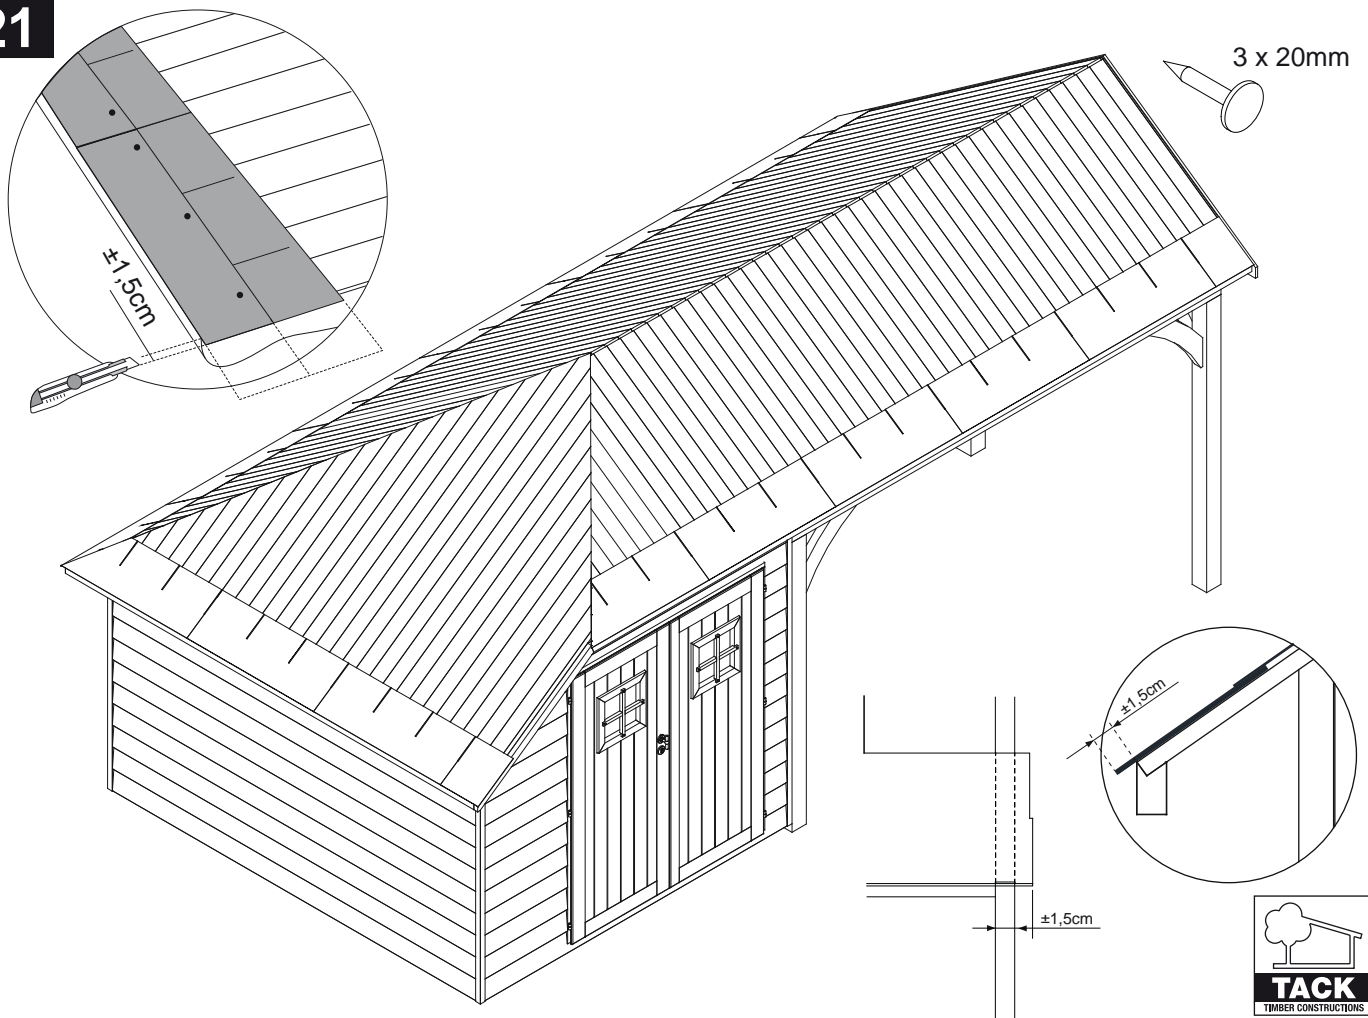


22

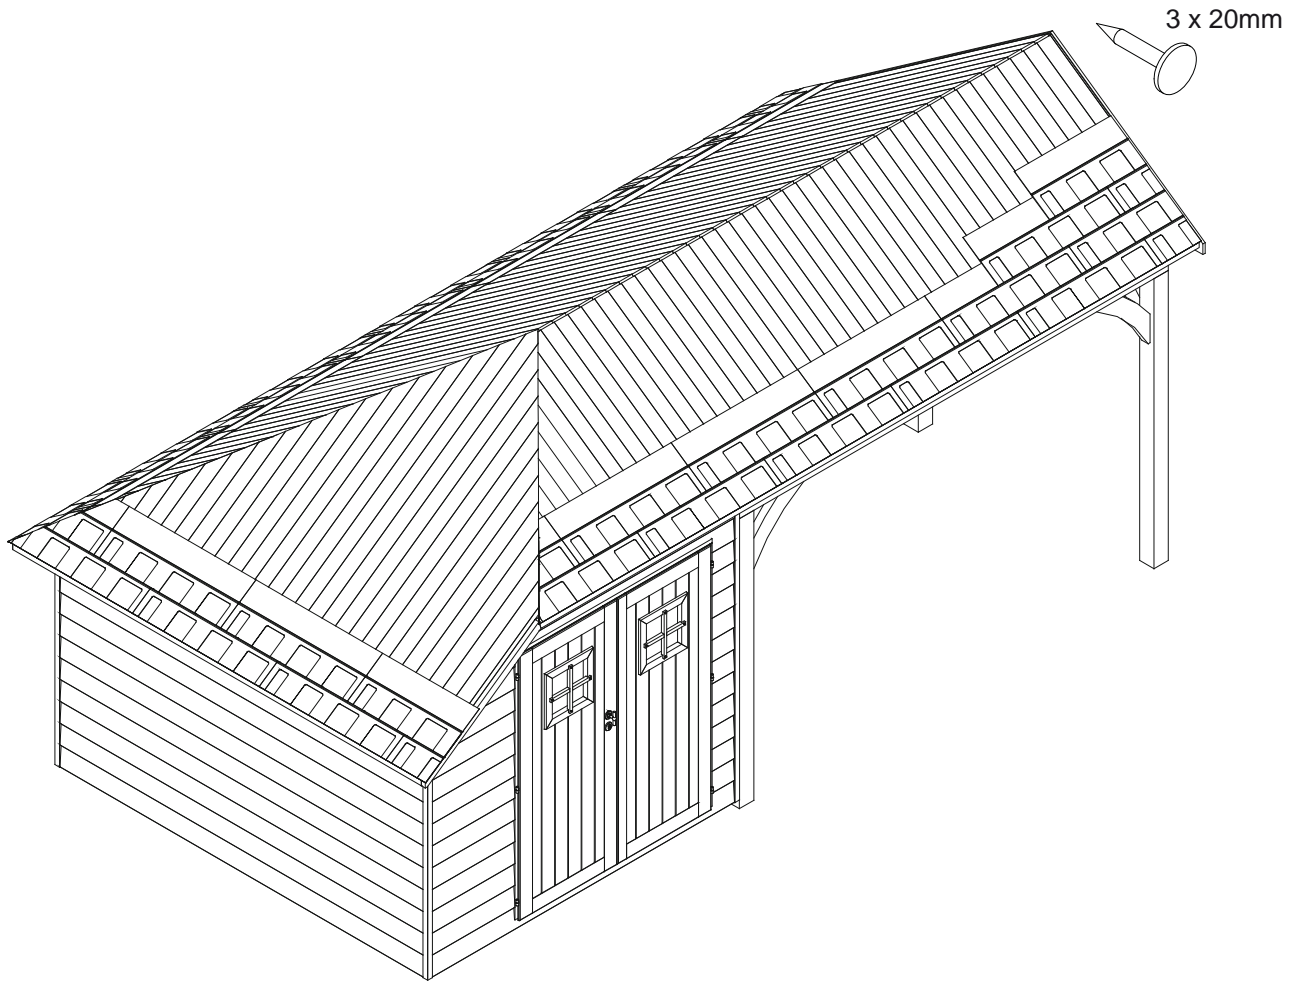

23

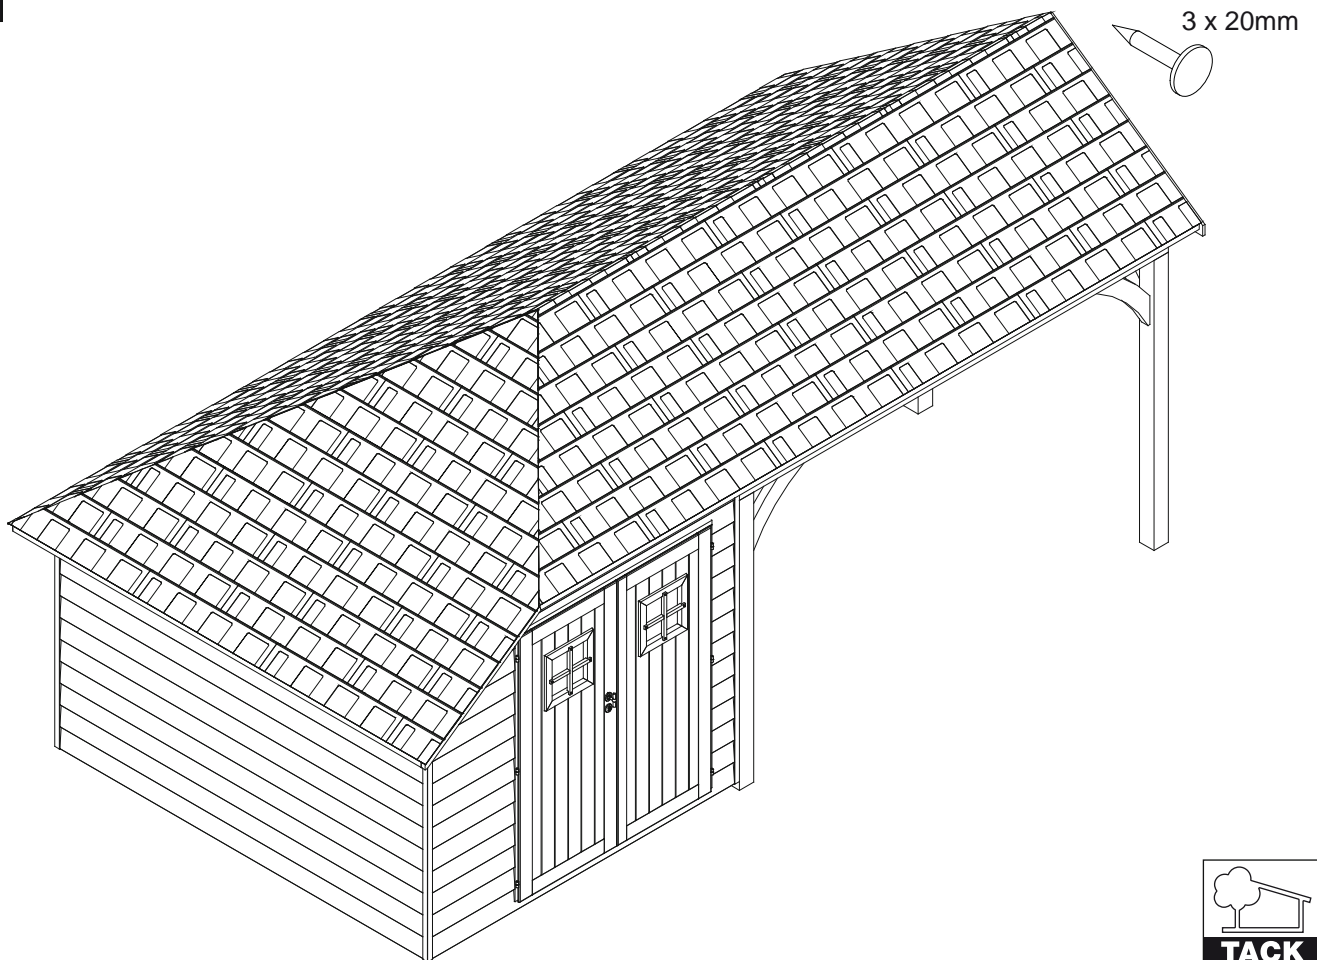

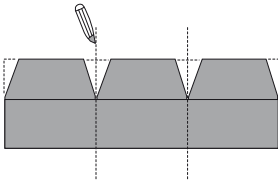

3 x 20mm

