

PN RABAT SHEFFIELD E

Montagehandleiding

Notice de montage


Manual

Montageanleitung





www.tack.be


01

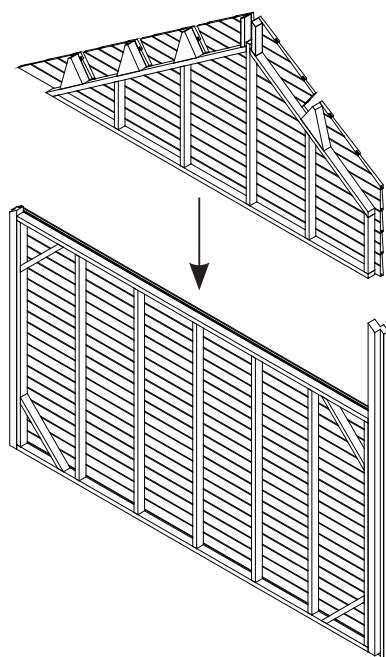


Ø 4 x 60mm

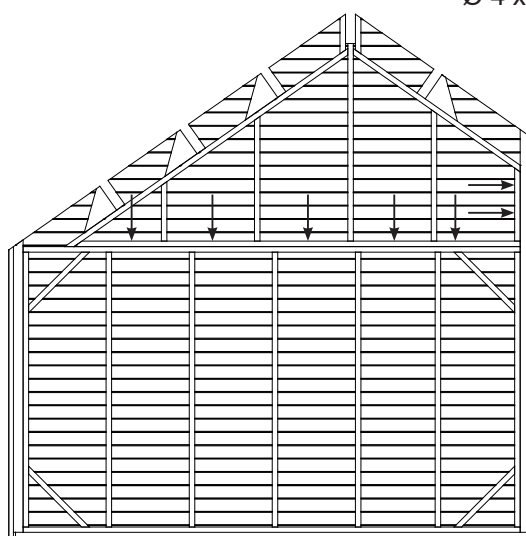


02

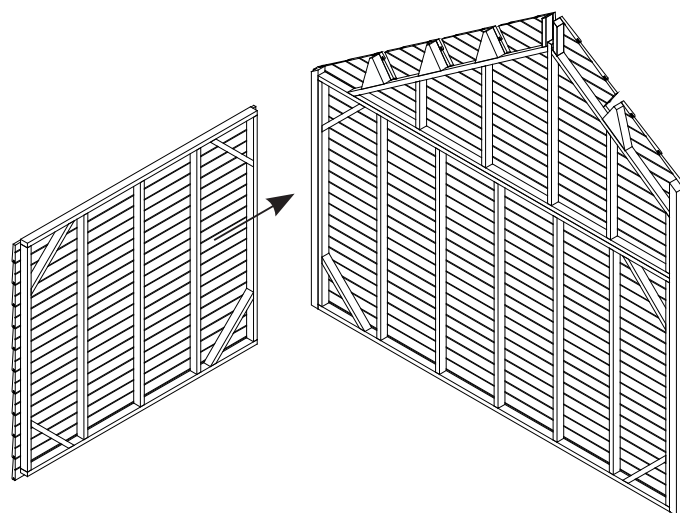



Ø 4 x 60mm




03

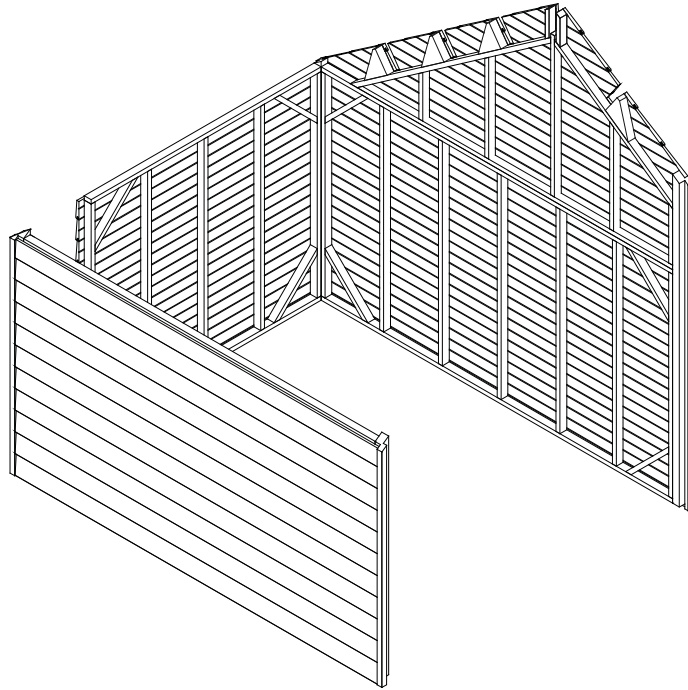


04




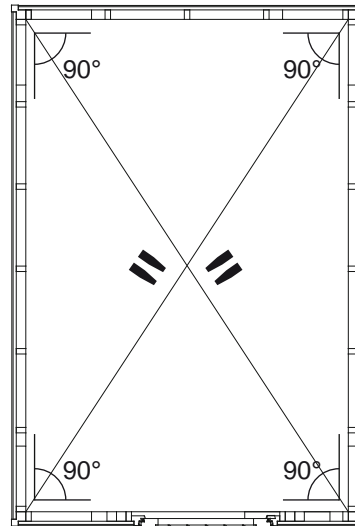
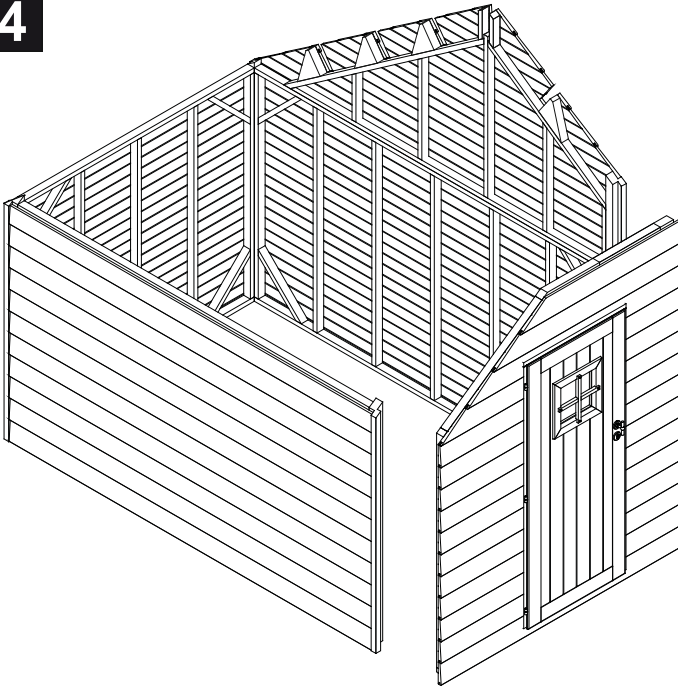


05


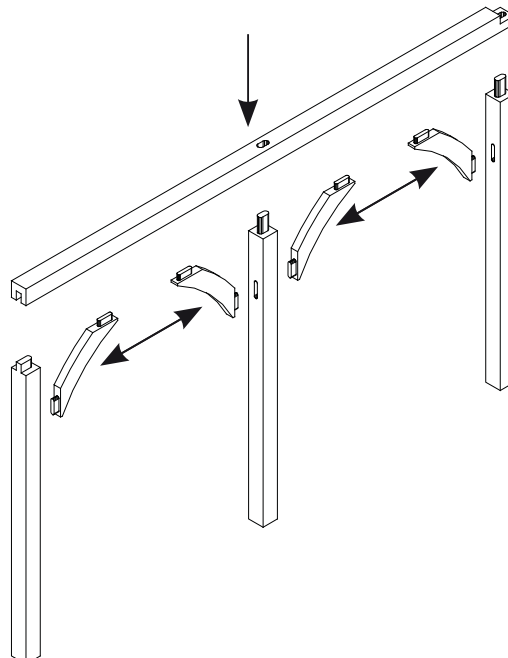


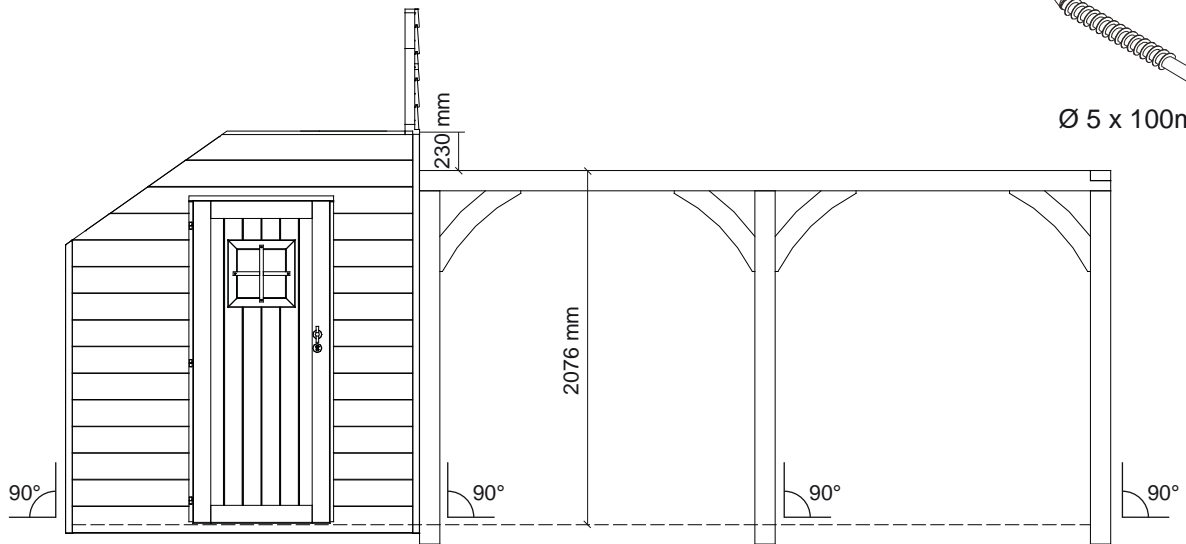



● **voorboren**
pre-percer
pre drill
Vorbohren

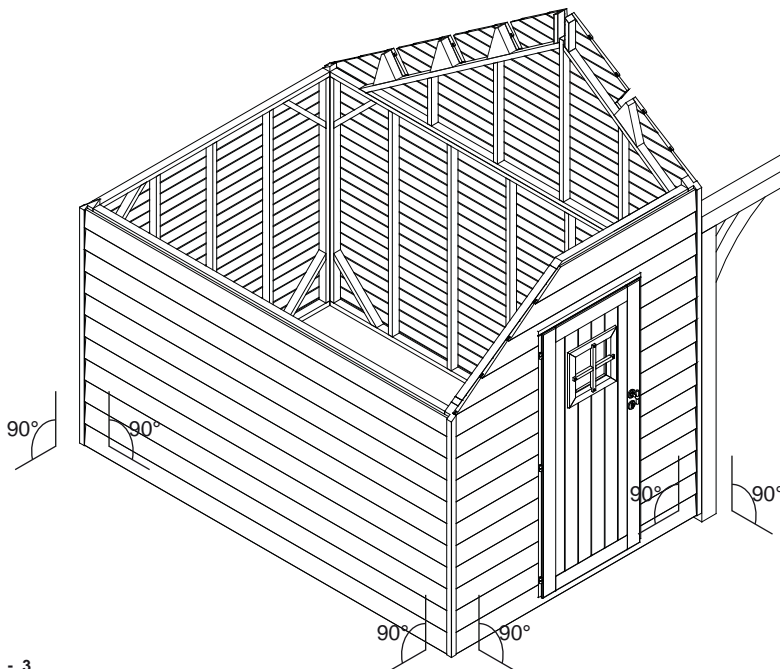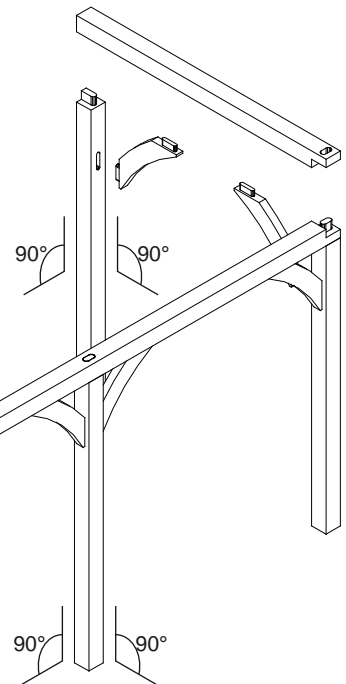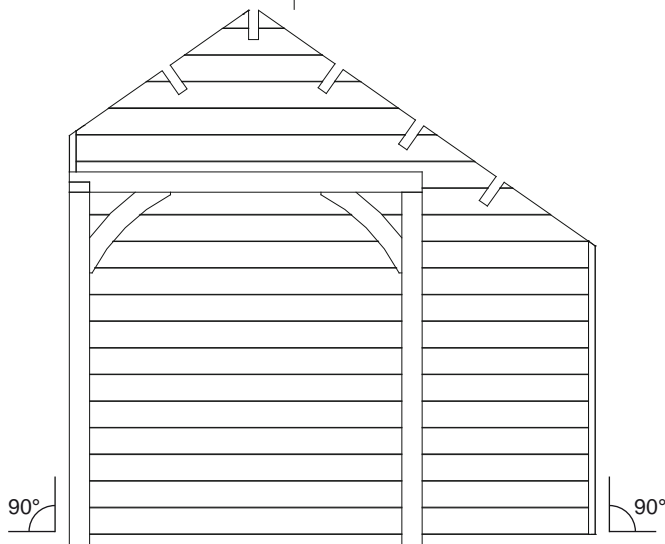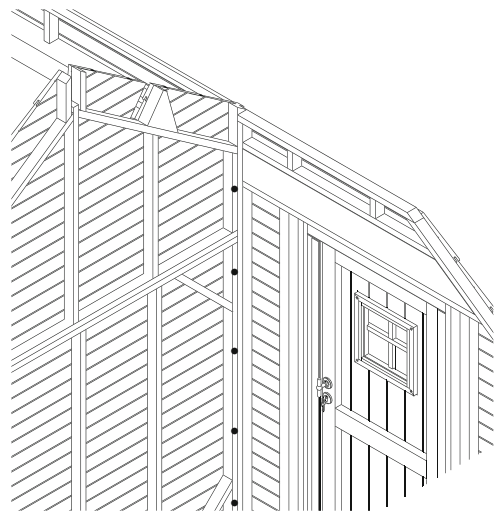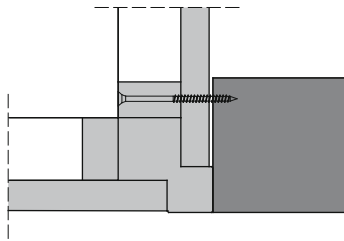



07

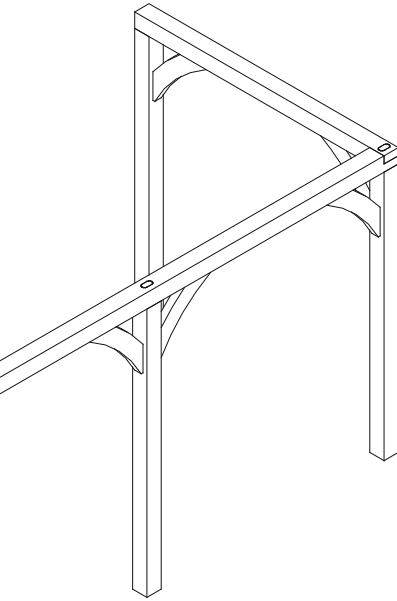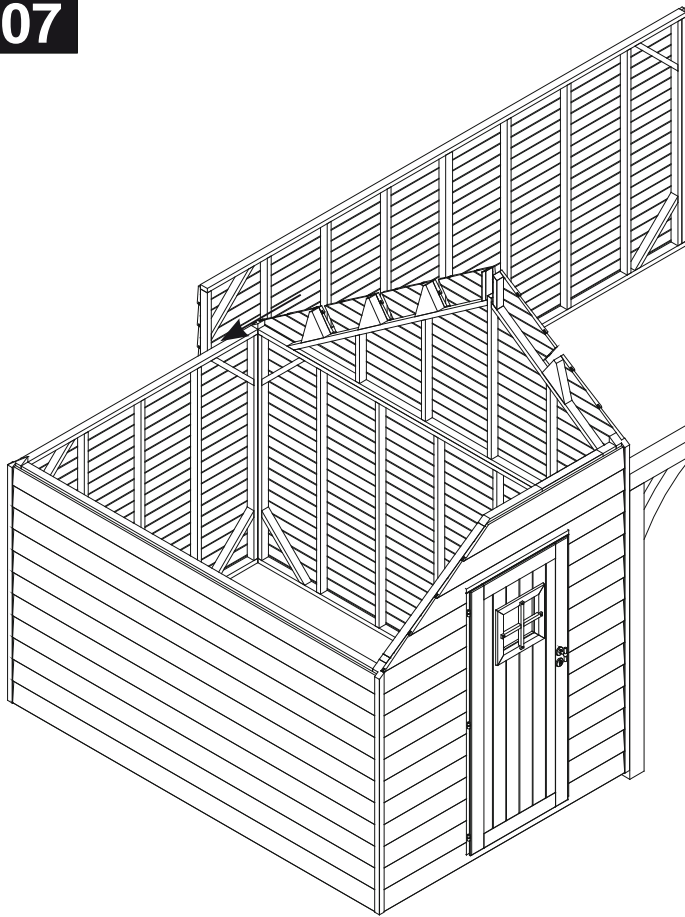



Ø 4 x 60mm 

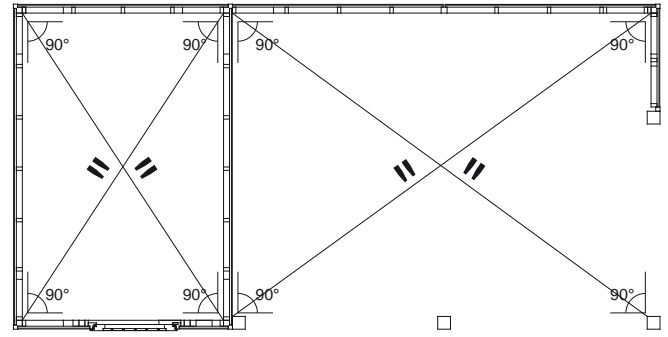


08

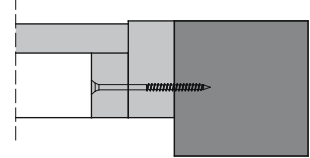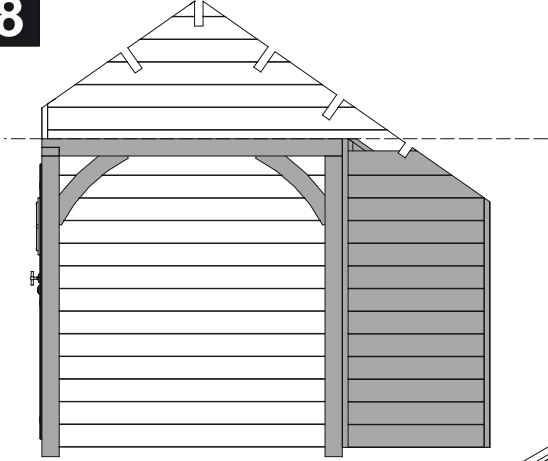


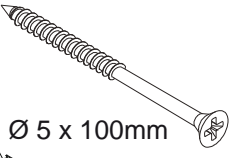• voorbereiden
pre-percer
pre drill
Vorborenen Ø 5 x 100mm 

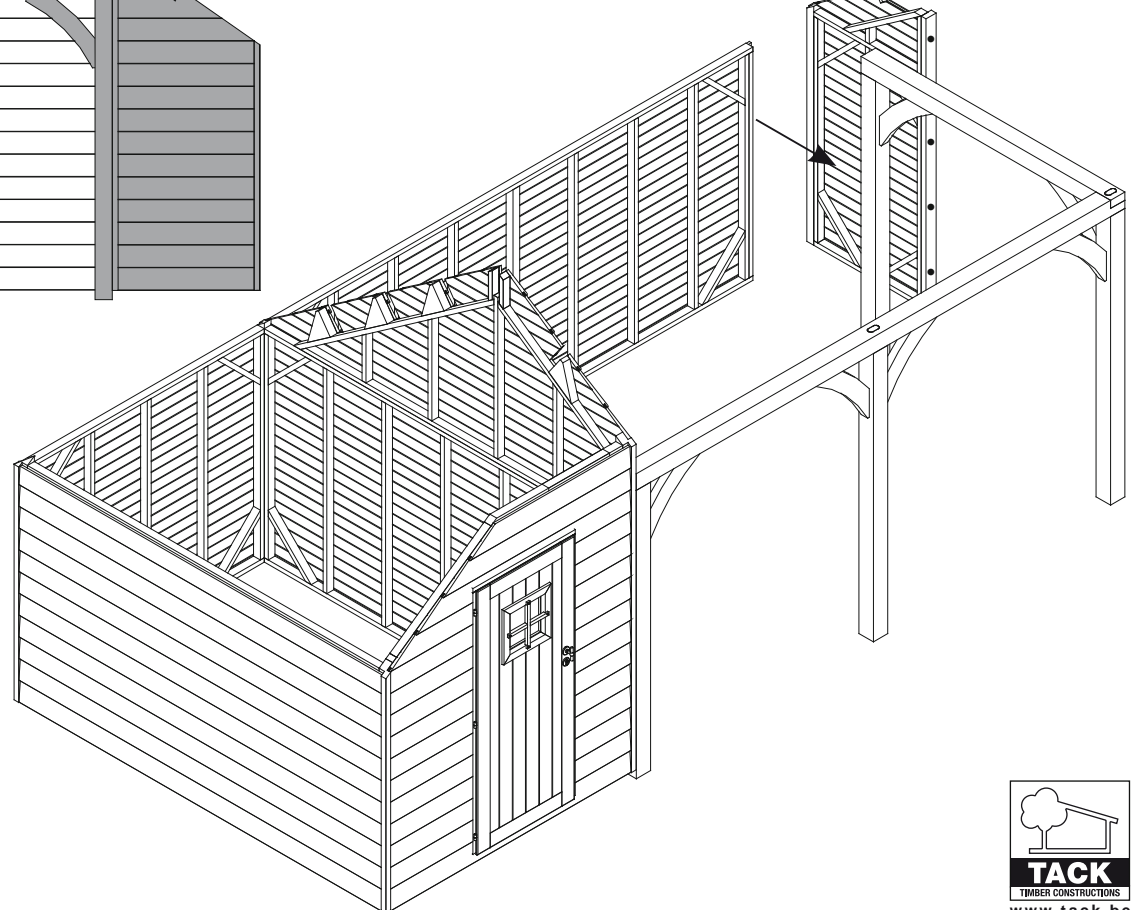


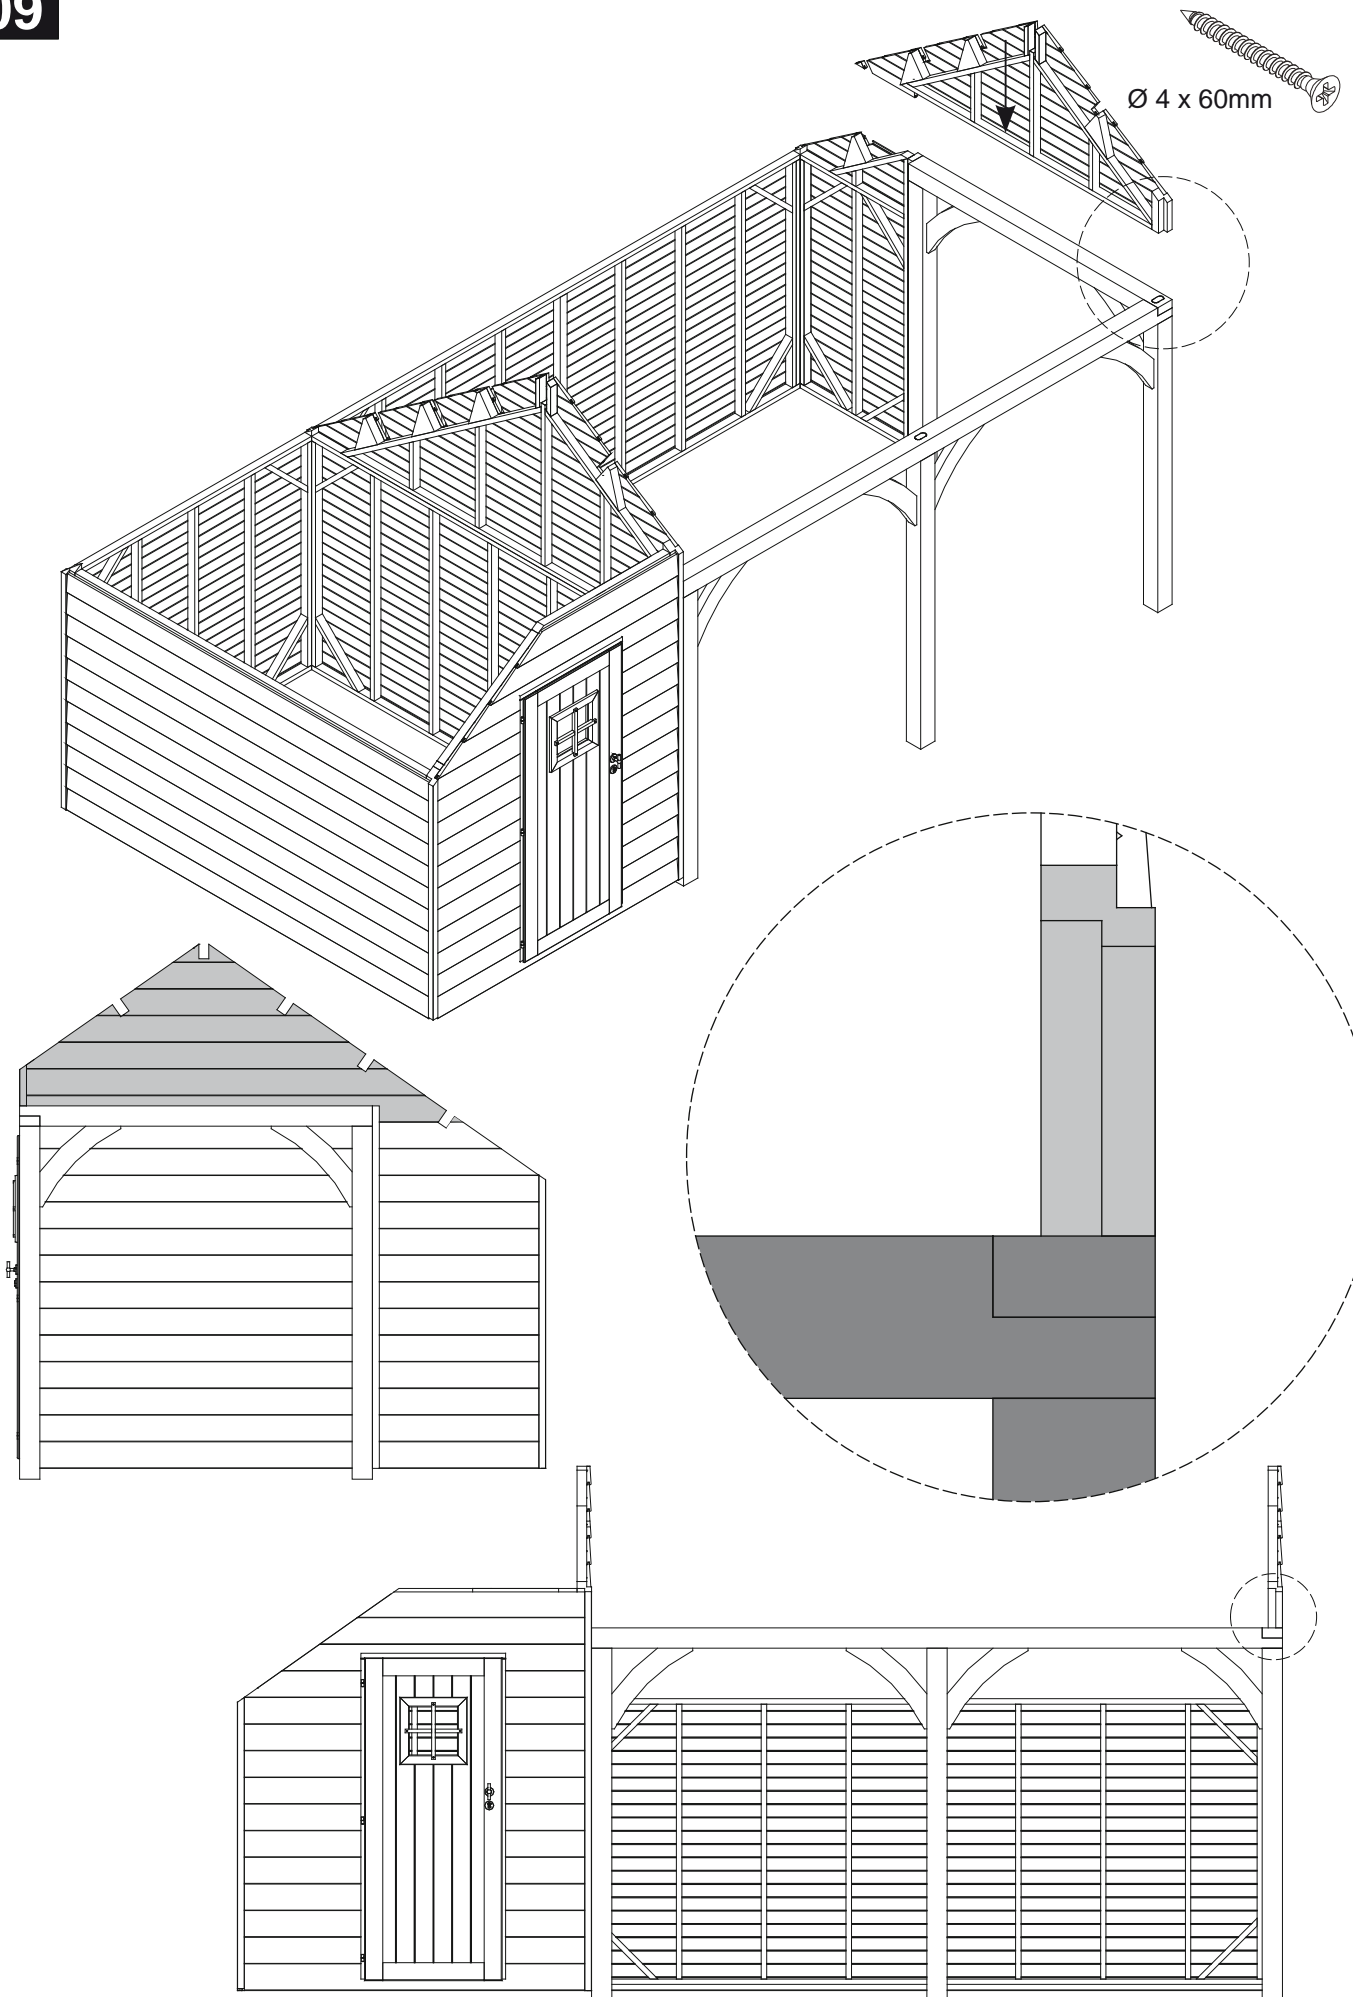


10

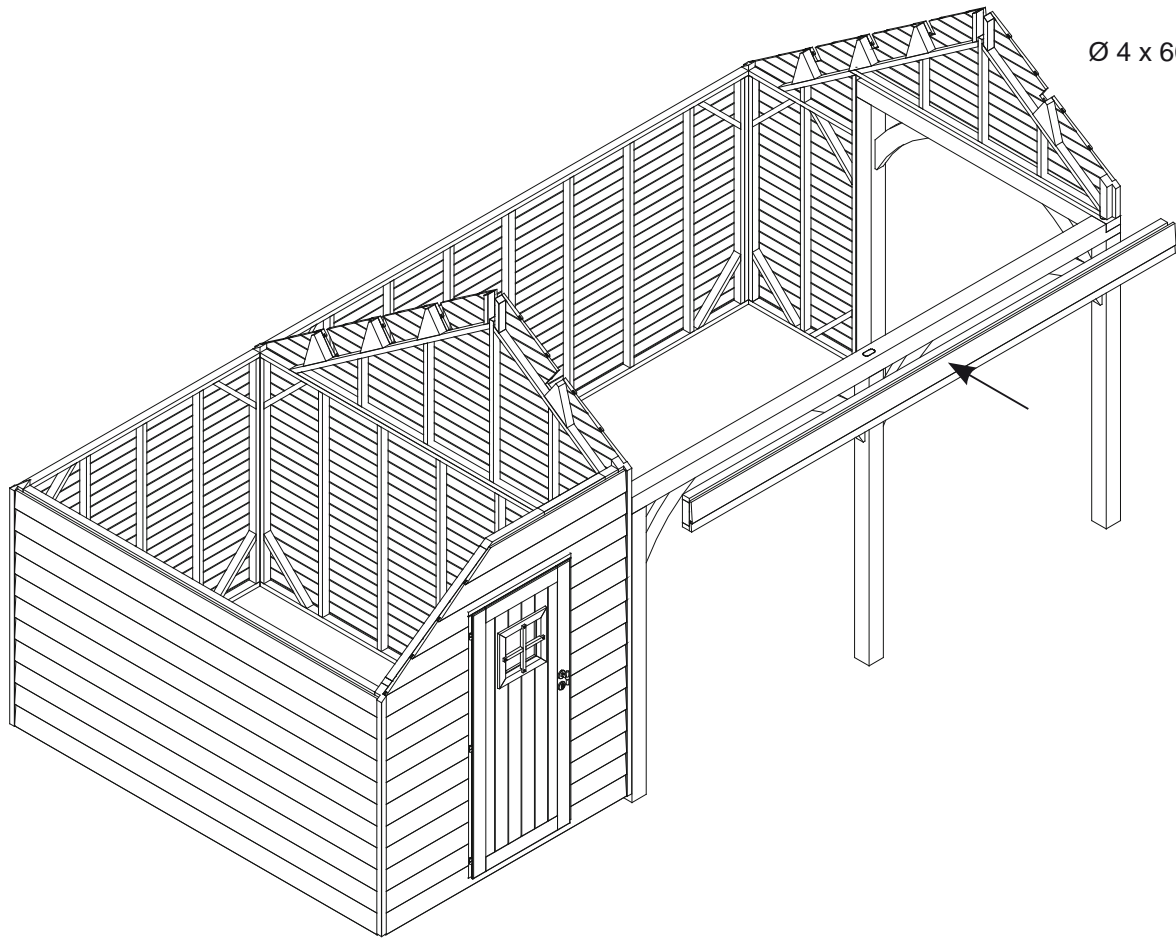


Ø 4 x 60mm




11

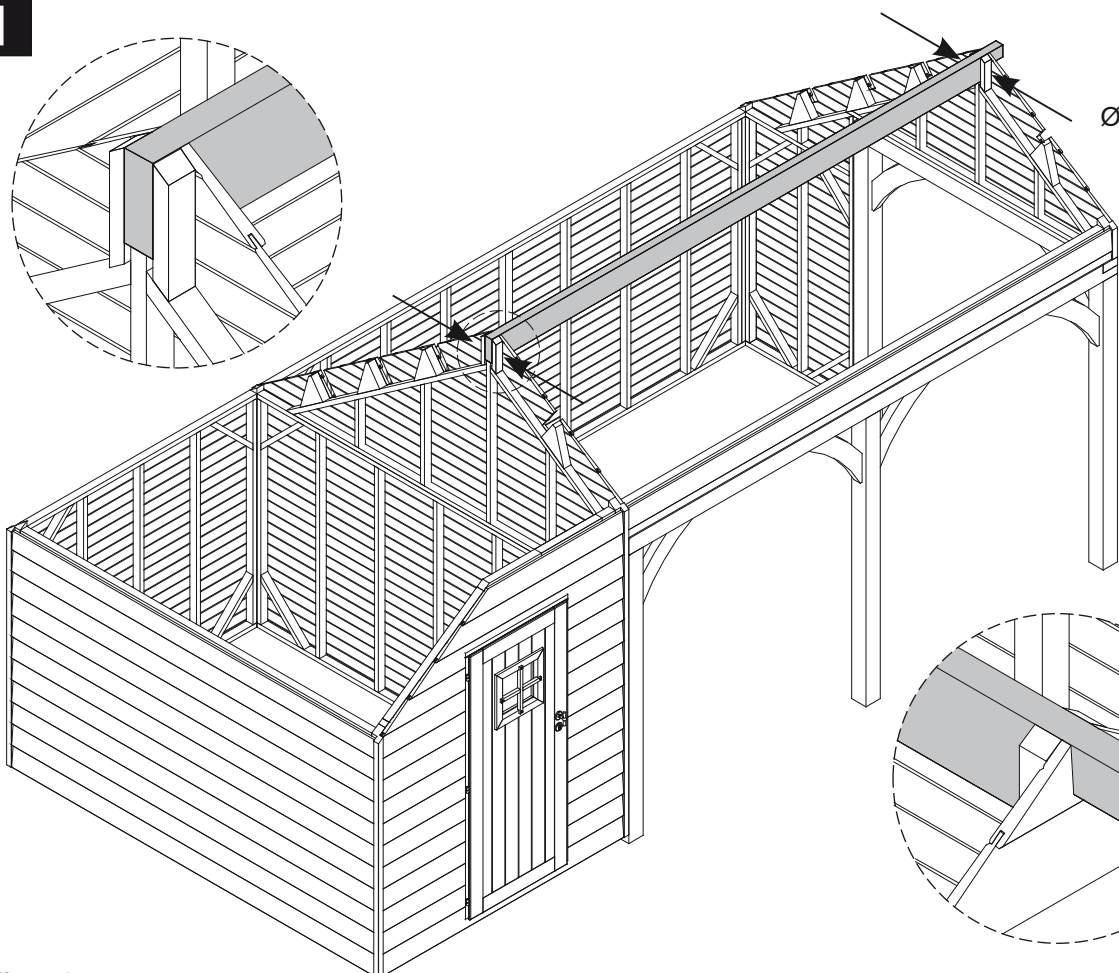


Ø 4 x 60mm




12

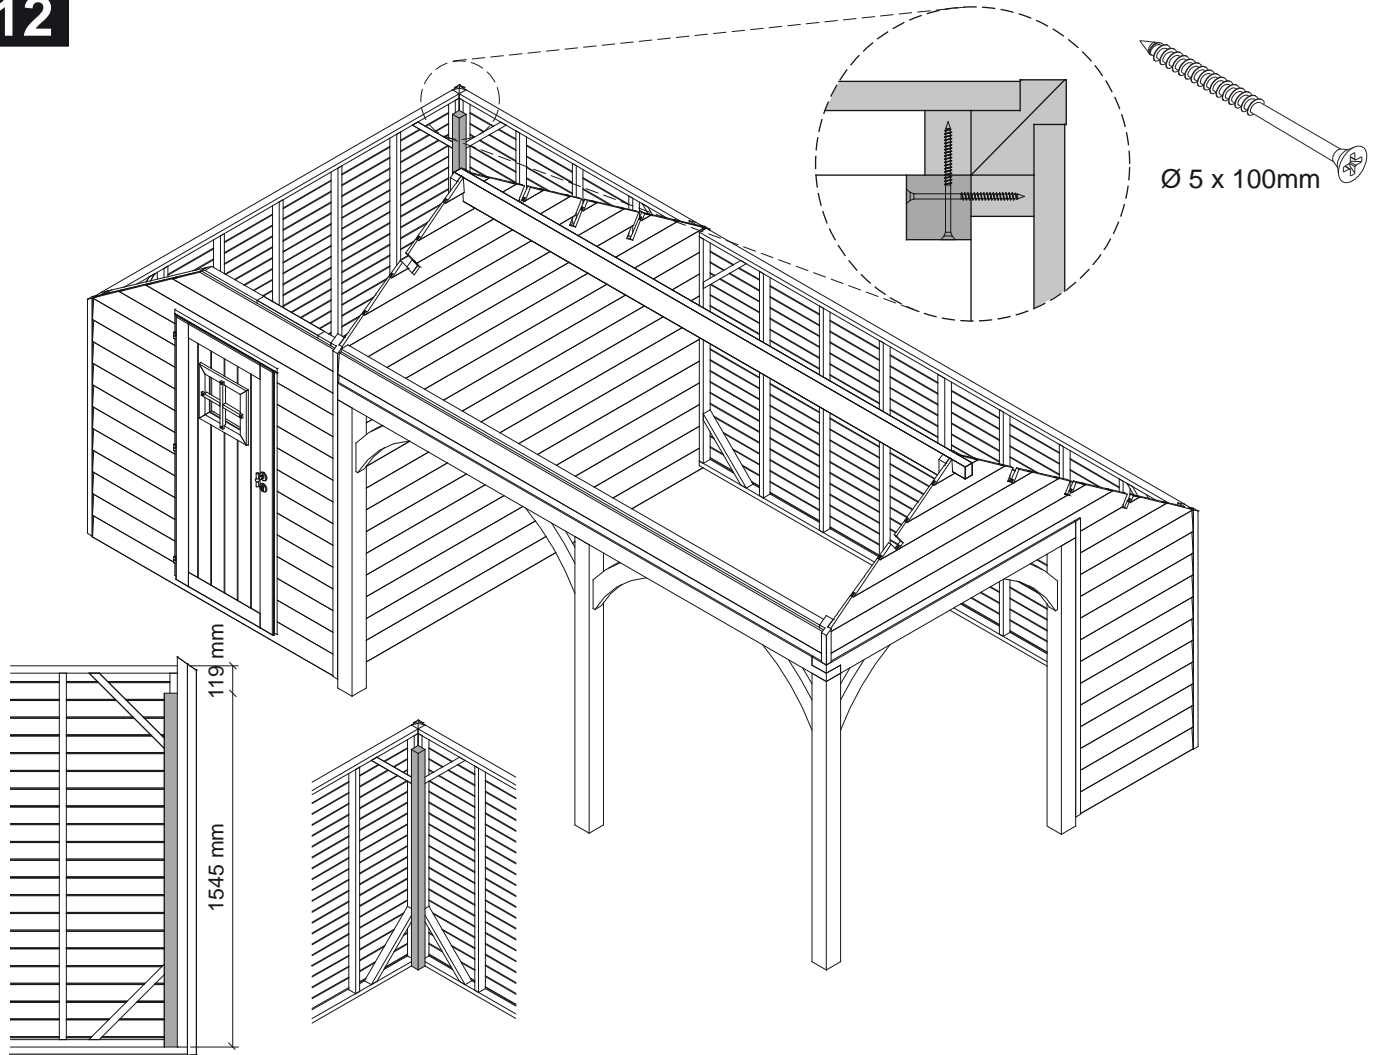

13

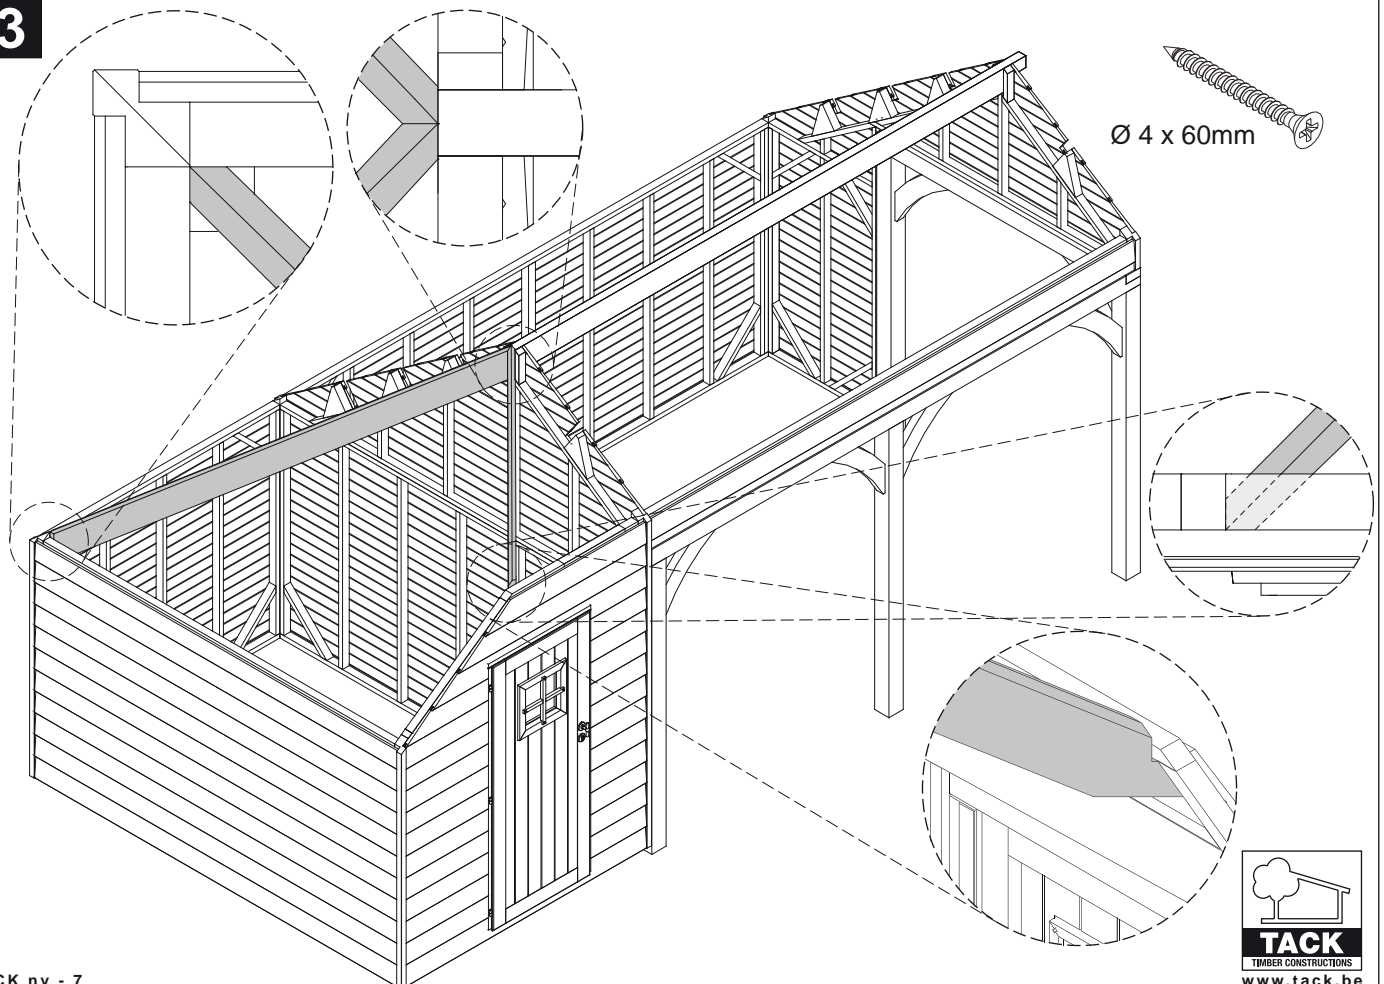


14

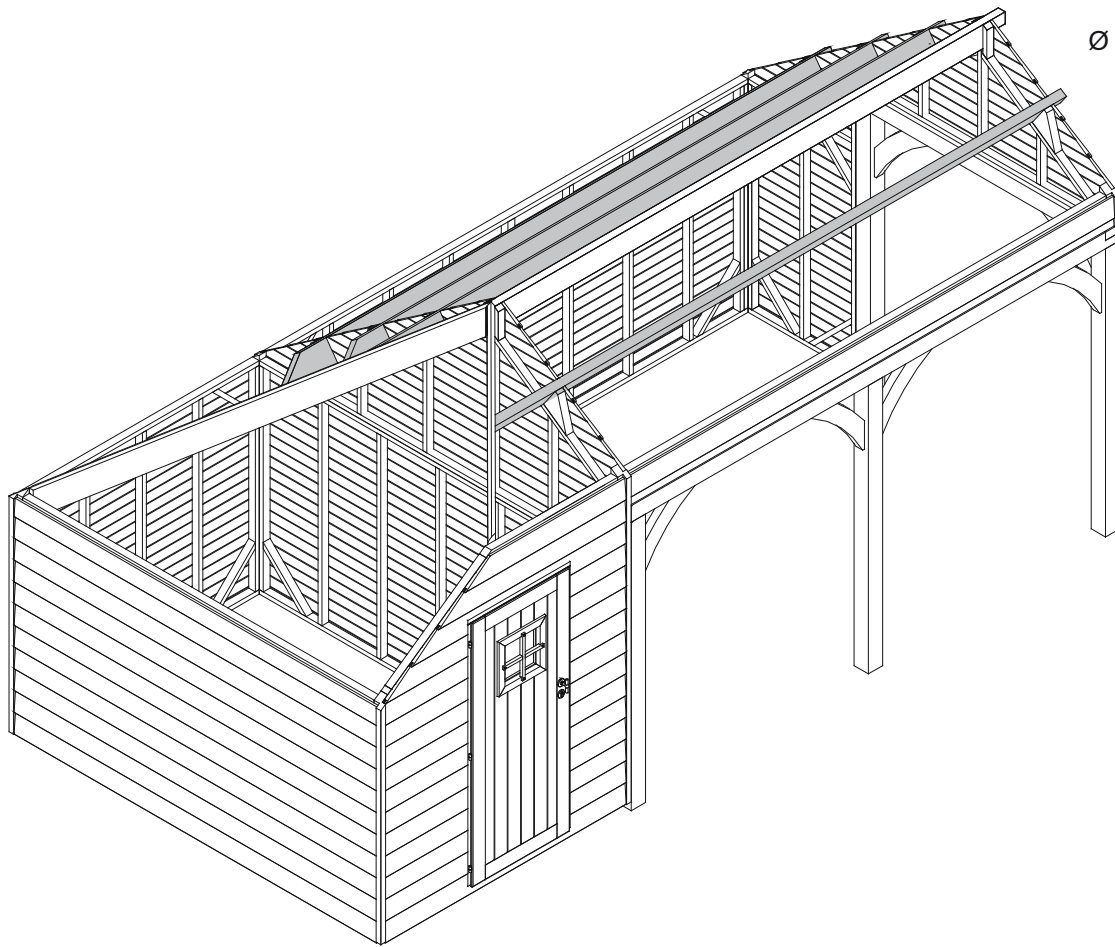


Ø 5 x 80mm

15

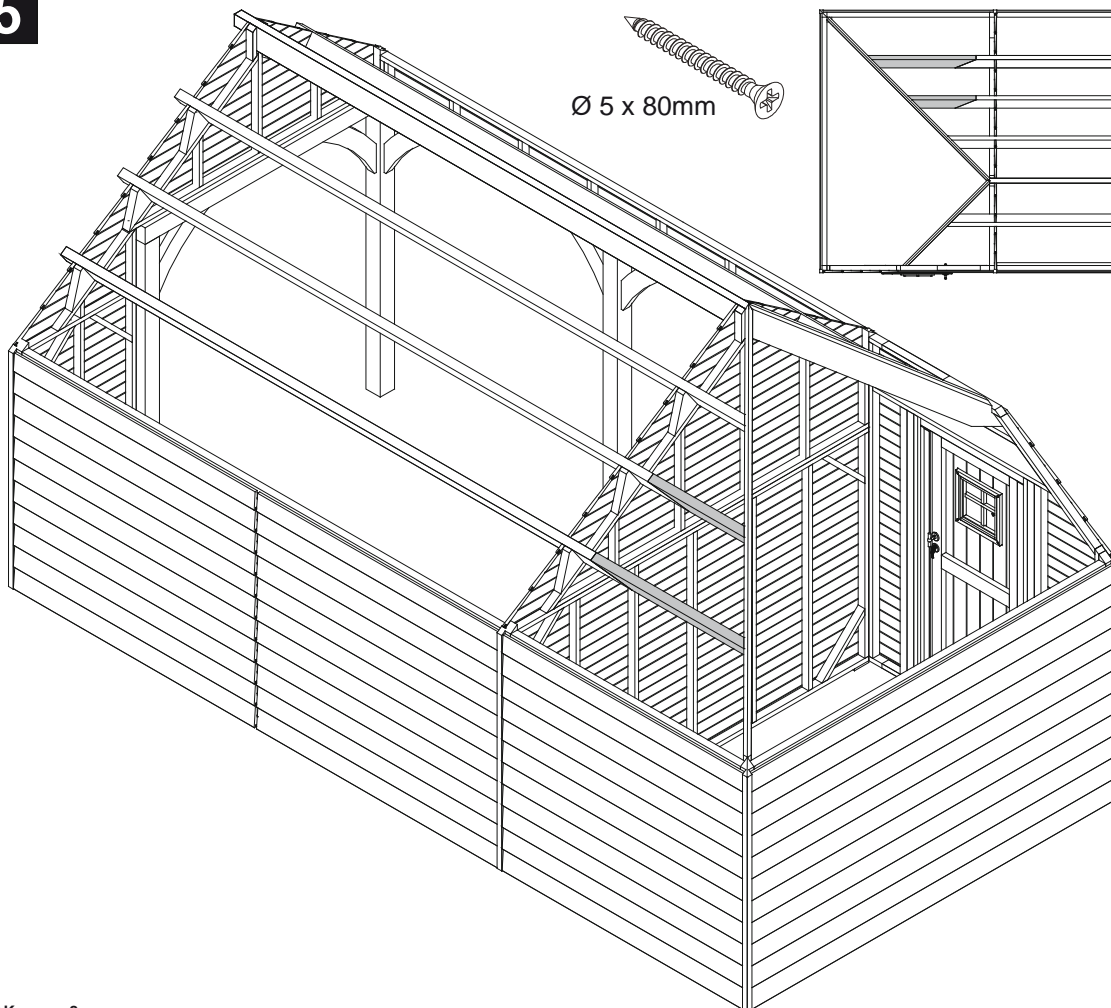


Ø 5 x 80mm


16

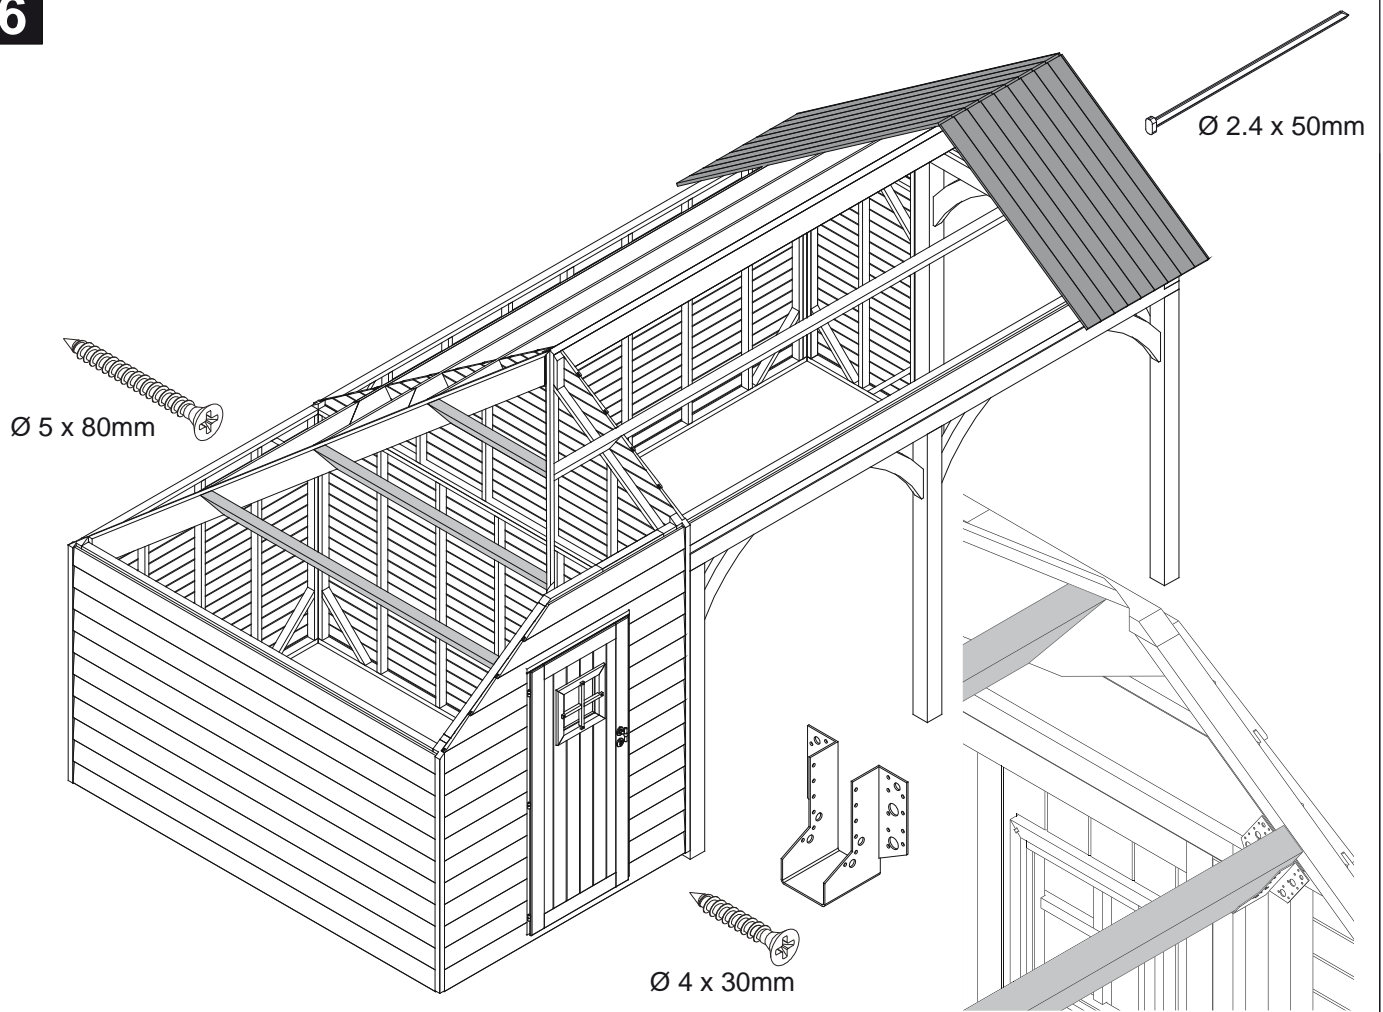


17

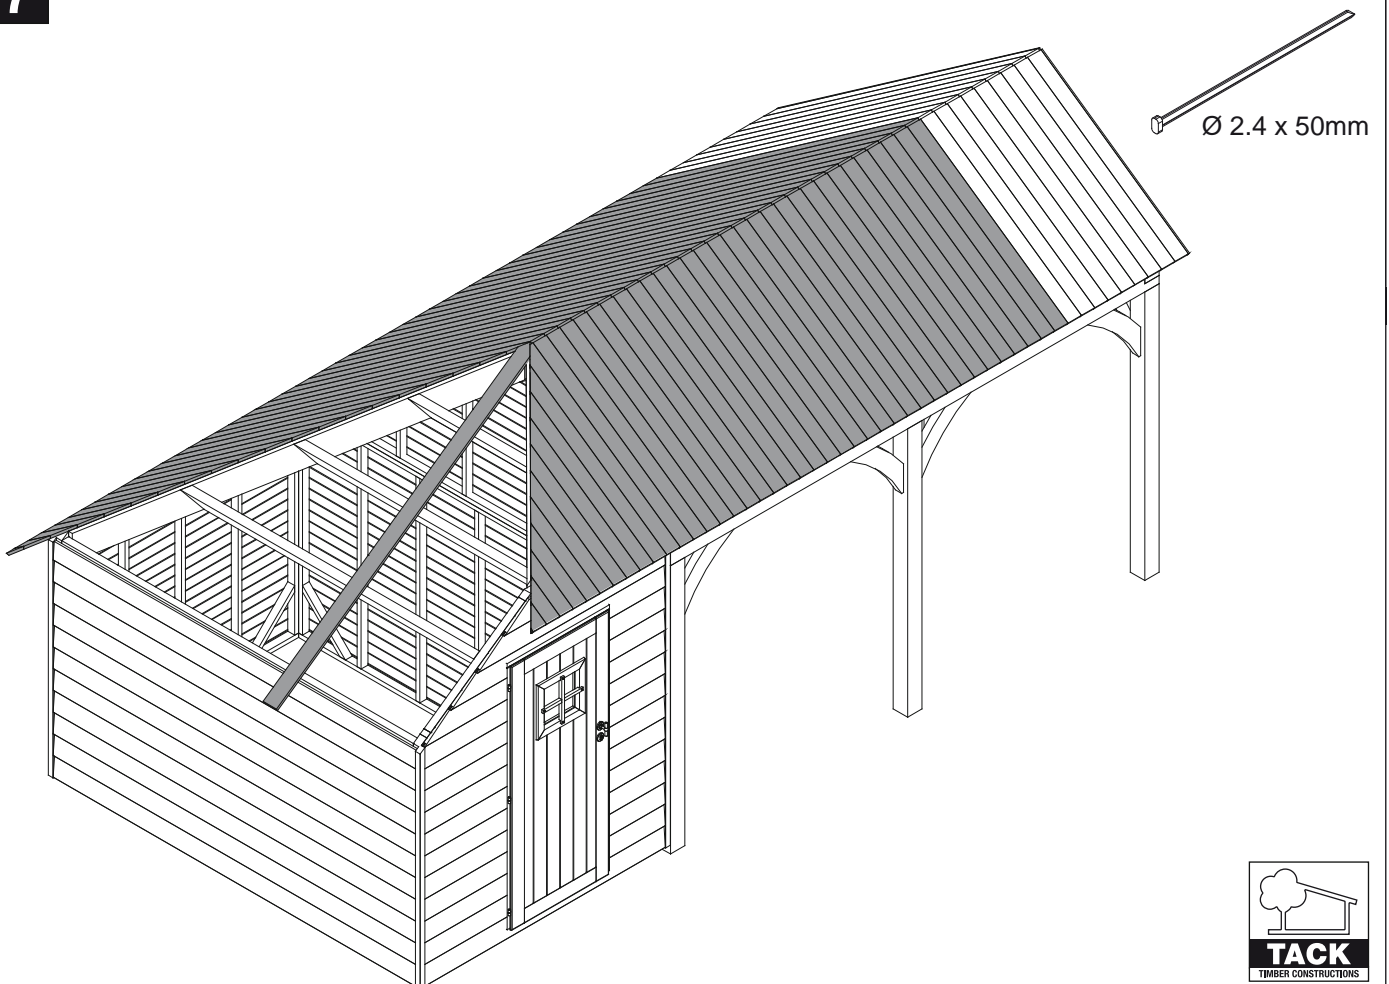


18

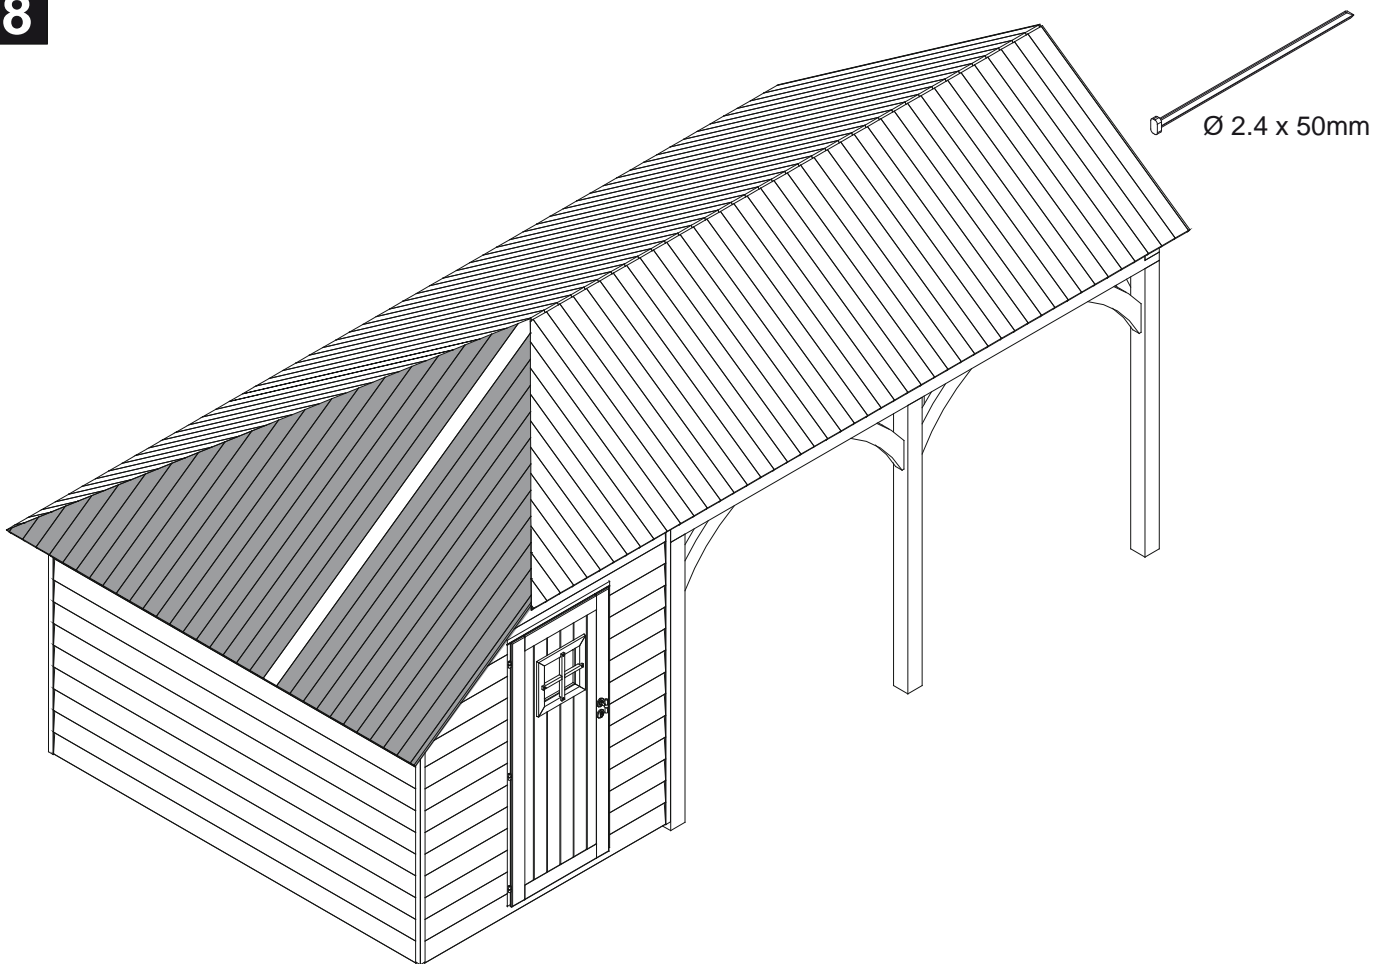


19

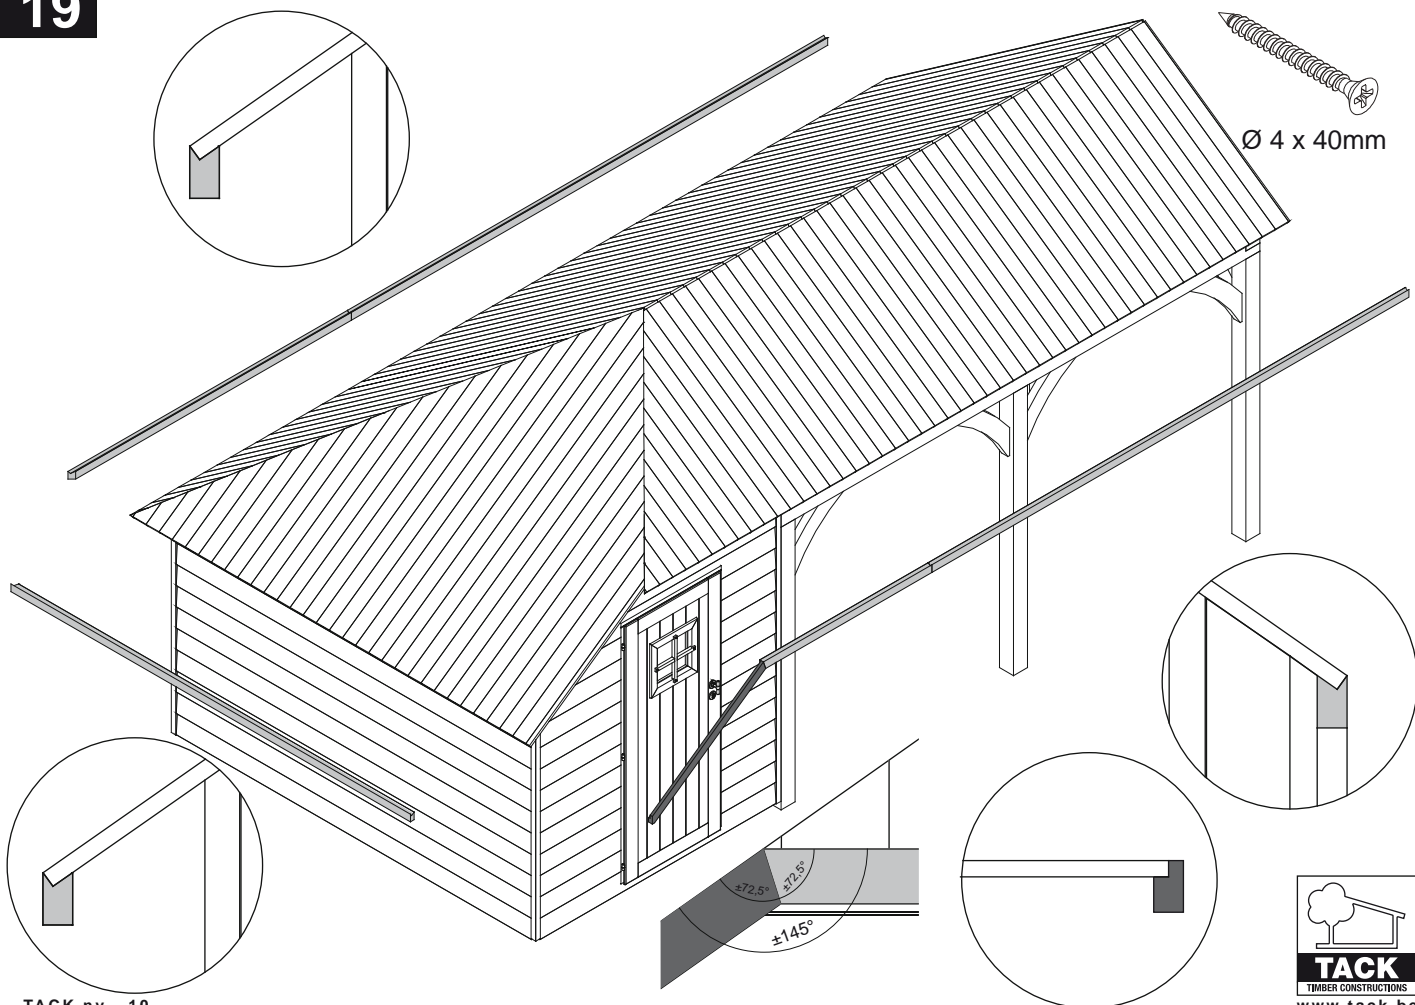


20

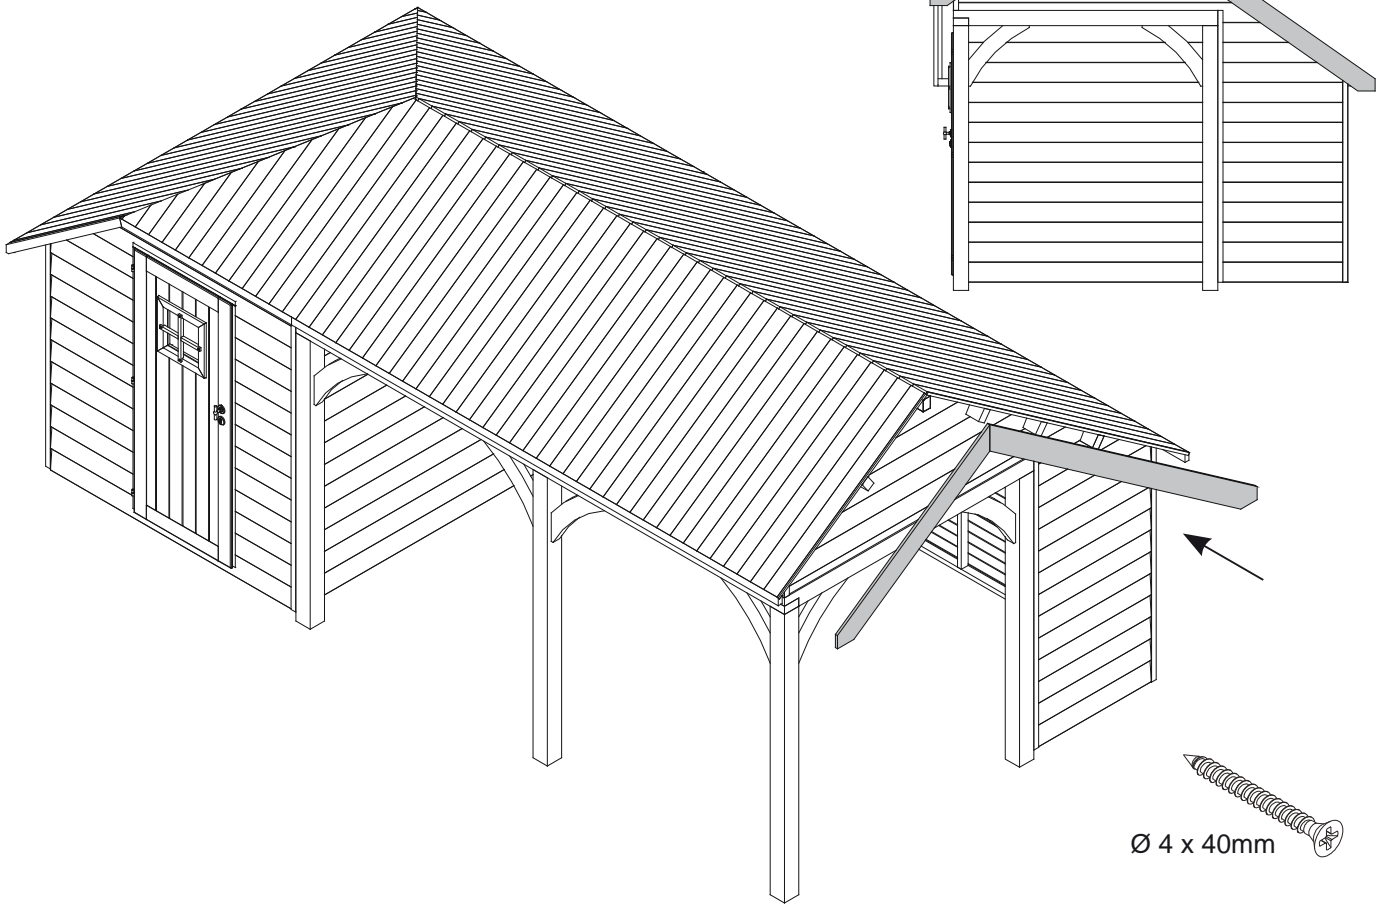


21

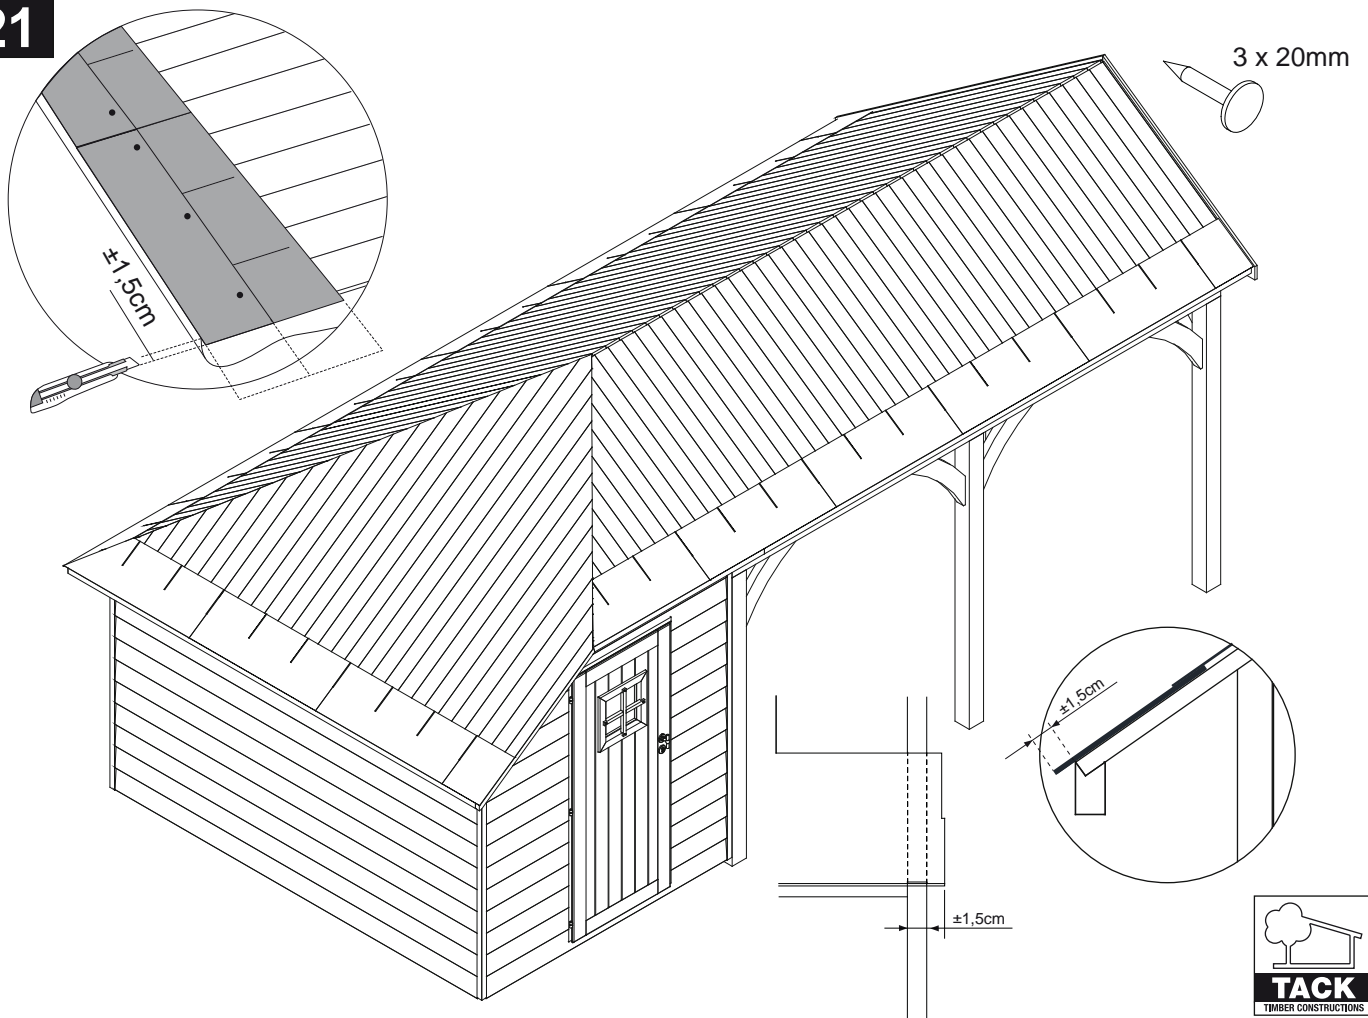


22

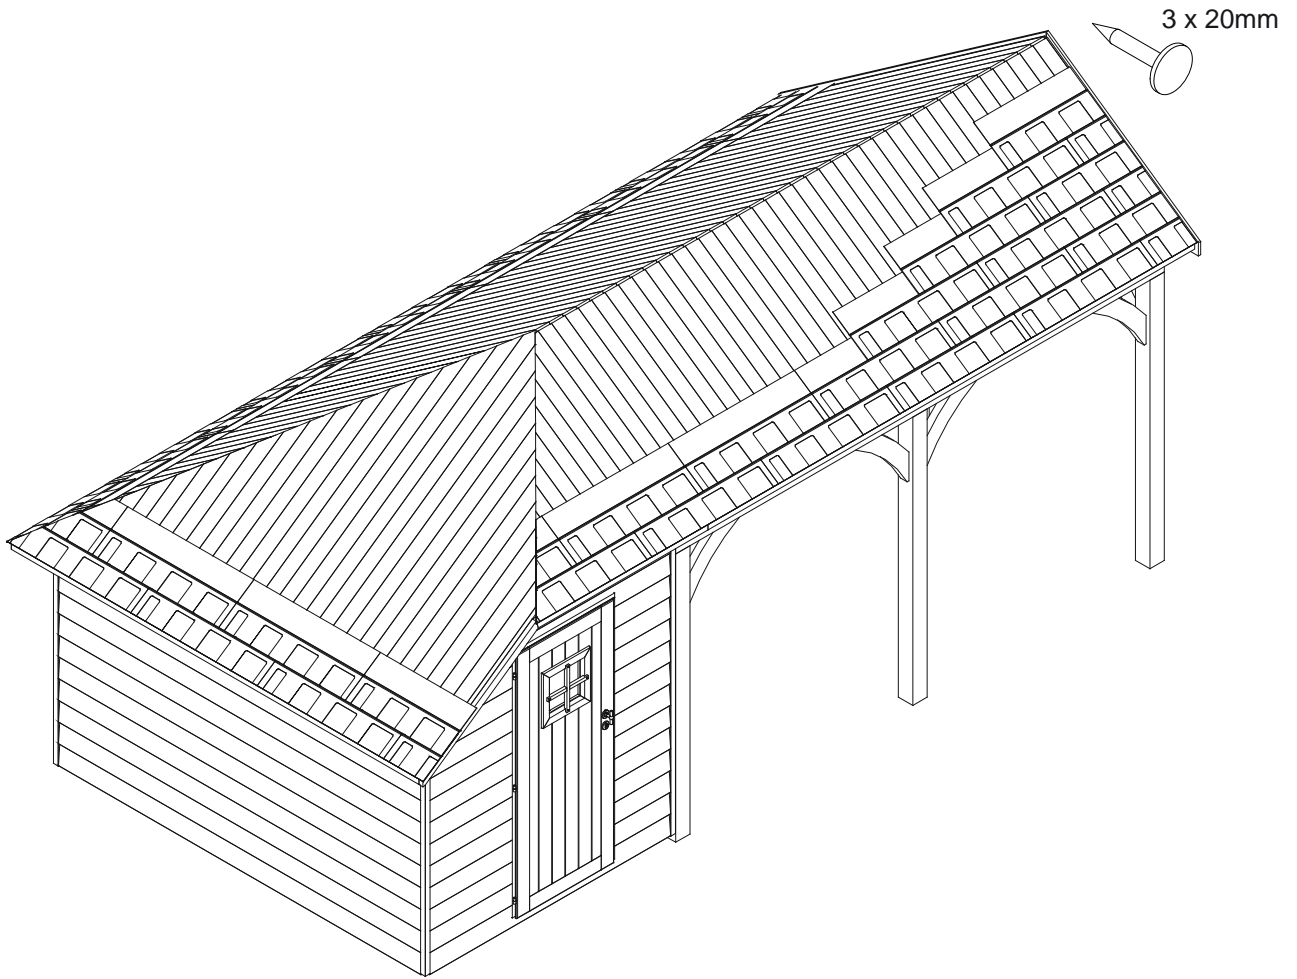

23

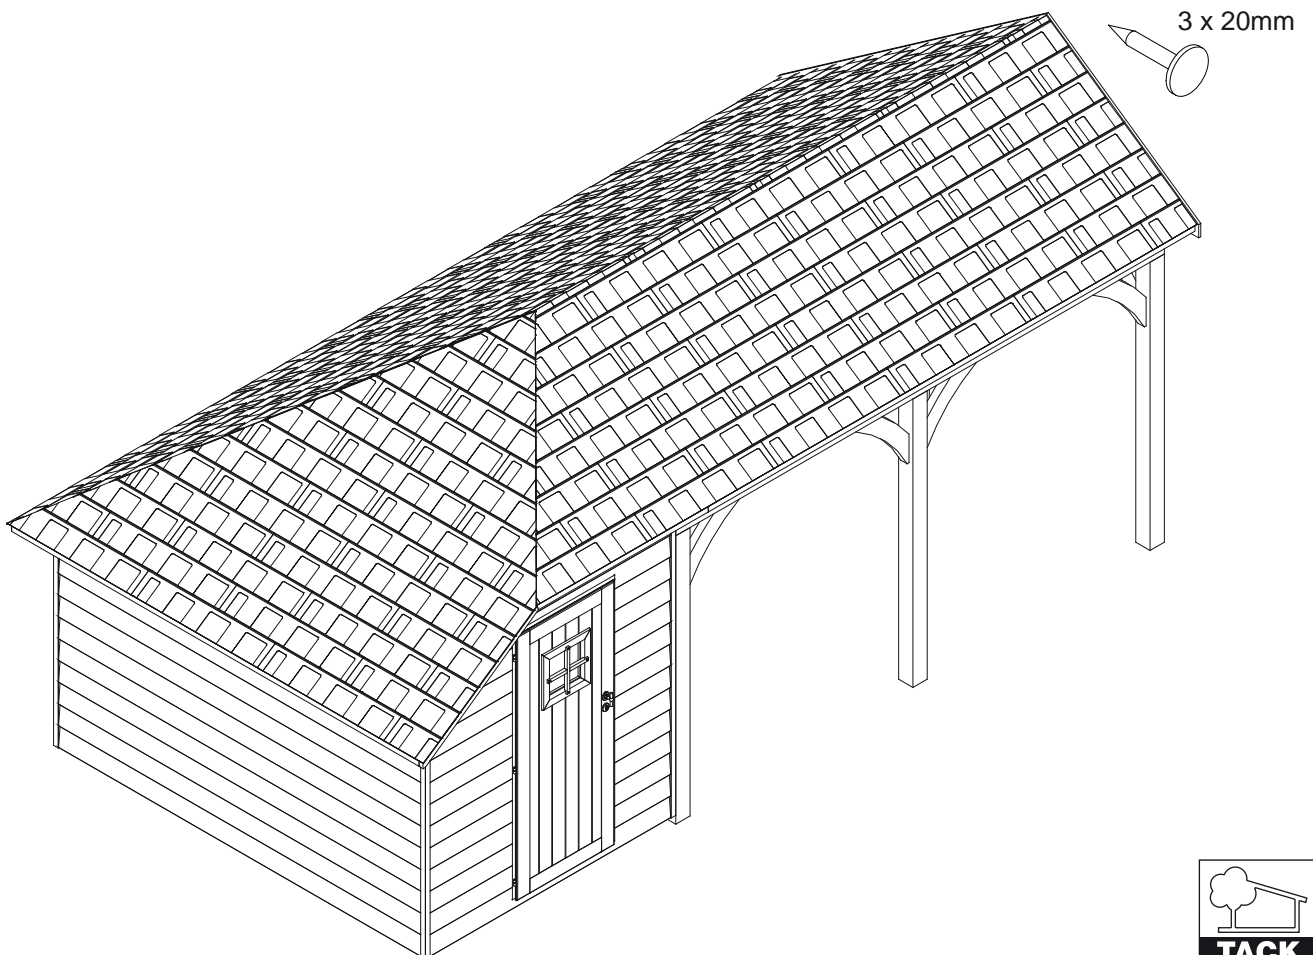

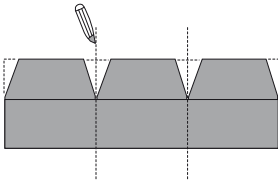

3 x 20mm

